

**PP7MX PRINTER  
DRIVER INSTALLATION  
INSTRUCTION**

**Pinnacle Technology Corp.**



# Contents


1.	USB / Serial /Parallel Printer Driver Installation.....	1
1.1.	Printer Driver Installation.....	1
1.1.1.	Serial /Parallel Printer Driver Installation.....	2
1.1.2.	USB Printer Driver Installation.....	5
1.1.3.	Ethernet/WIFI Printer Driver Installation.....	6
1.1.4.	USB port convert to serial port Printer Driver Installation.....	7
1.2.	How to Know The Connect Port .....	17
1.3.	How to Config Connect Port .....	19
2.	BT Printer Driver Installation .....	25
2.1.	BT Printer Driver Installation.....	25
2.2.	BT Dongle Driver Installation.....	27
2.3.	How to know the connect port.....	31
2.4.	How to Config Connect Port .....	32
3.	Wireless 2.4G/Wireless 433 Printer Driver Installation.....	32
3.1.	Wireless Printer Driver Installation.....	32
3.2.	Wireless 433 Base Station .....	32
3.3.	Wireless 433 USB Dongle/2.4G.....	34
3.3.1.	USB Dongle Driver Installation.....	34
3.3.2.	How to Know The Connect Port.....	37
3.3.3.	Dongle Parameter Setting .....	39
3.3.4.	How to Config Connect Port.....	39

# 1. USB / Serial /Parallel Printer Driver Installation


## 1.1. Printer Driver Installation



Connect the PP7X to PC, double click the file “Aclas printer\_x86\_x64.exe” in the folder ‘Aclas Printer’ to install the printer driver.

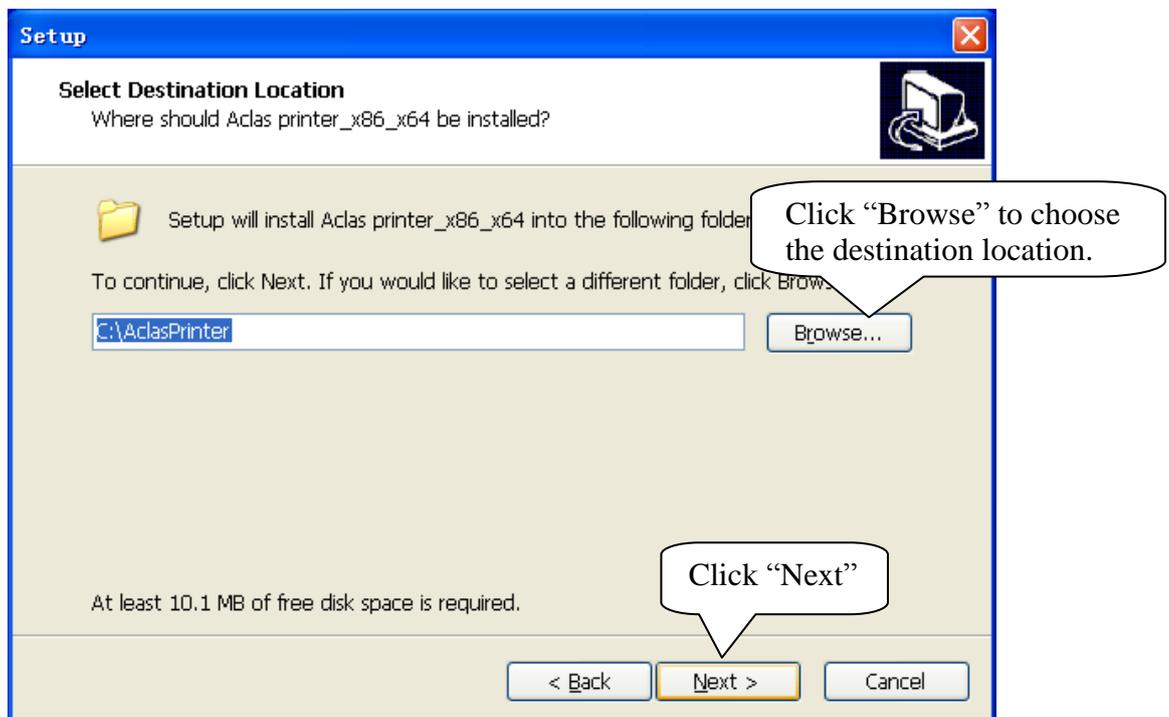
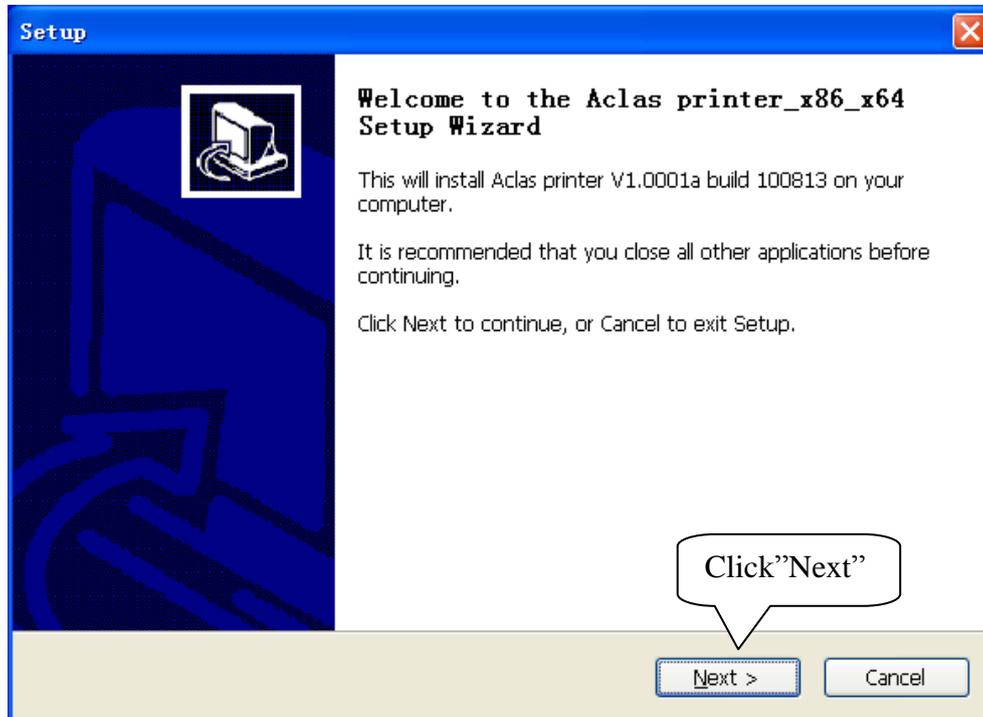


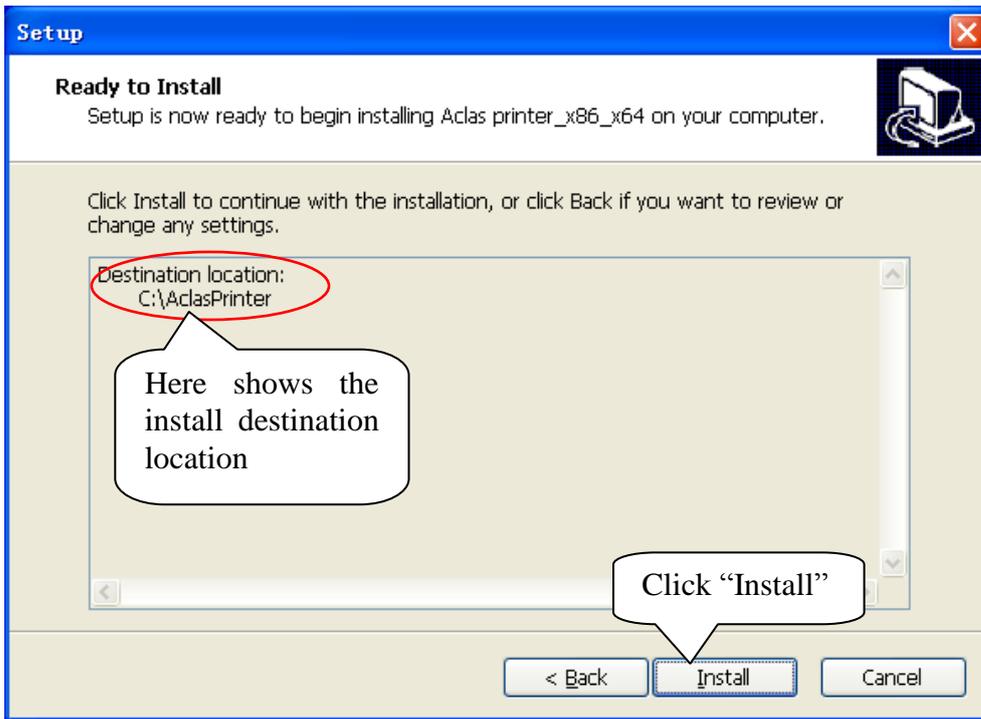



### 1.1.1.Serial /Parallel Printer Driver Installation

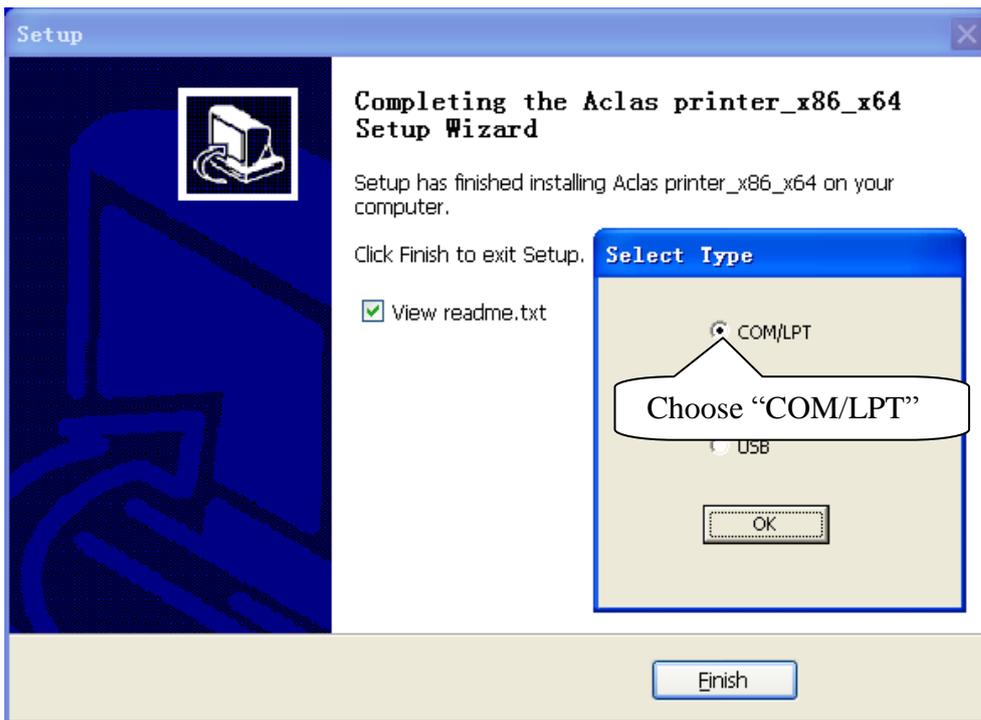


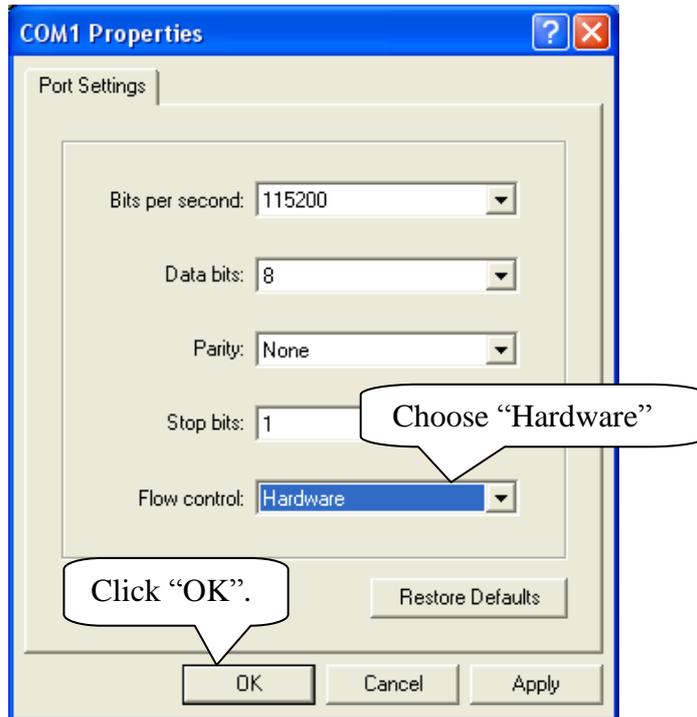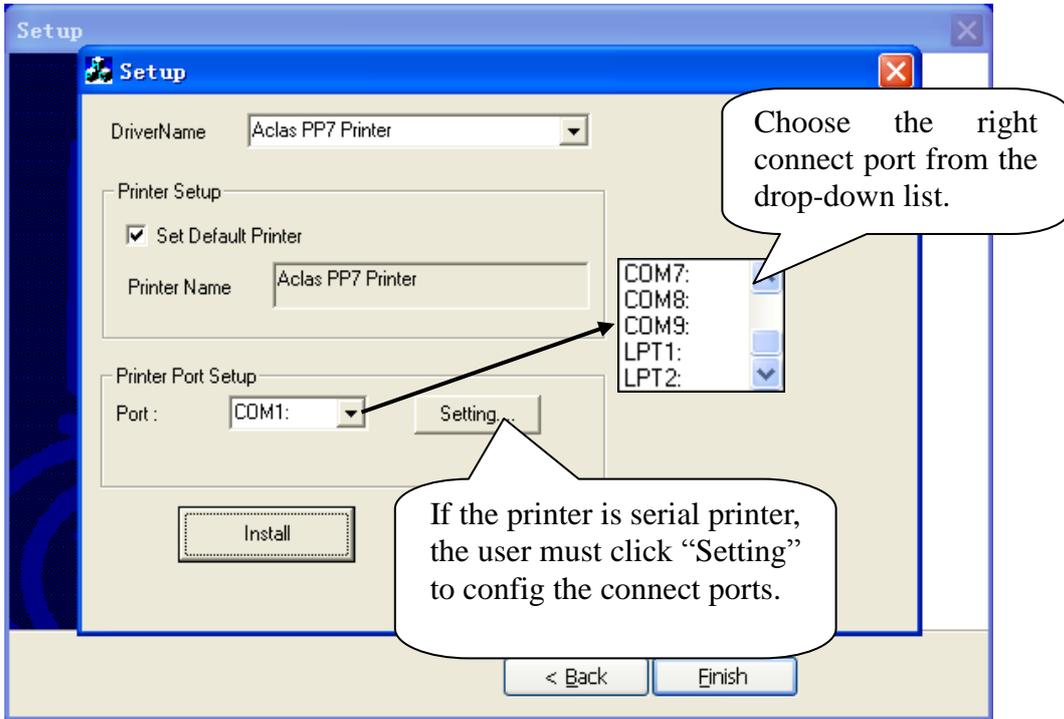

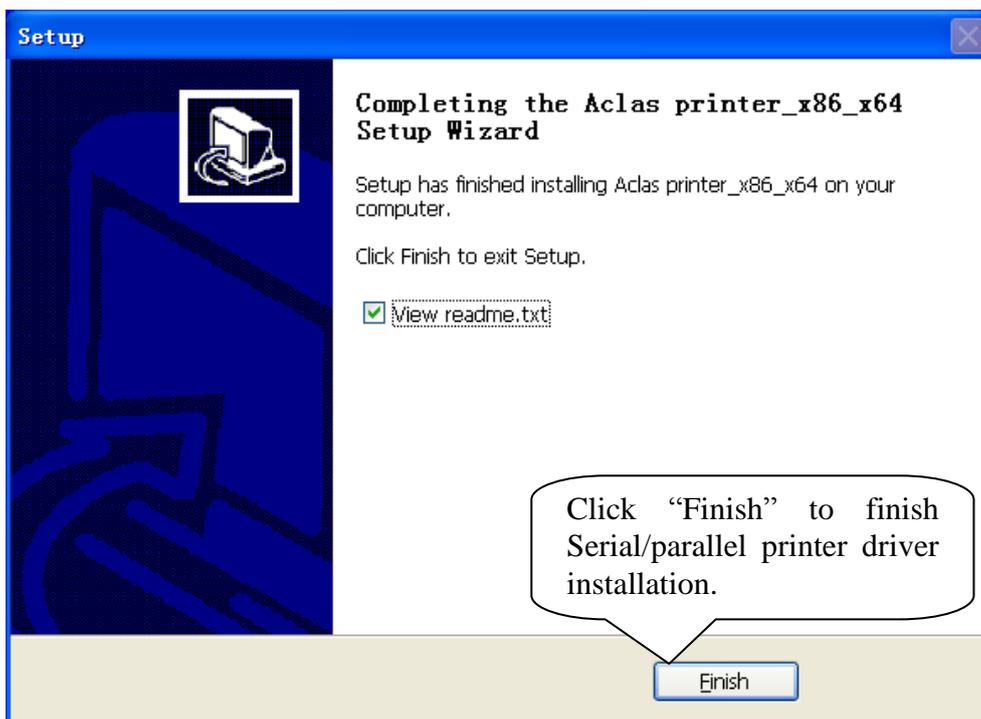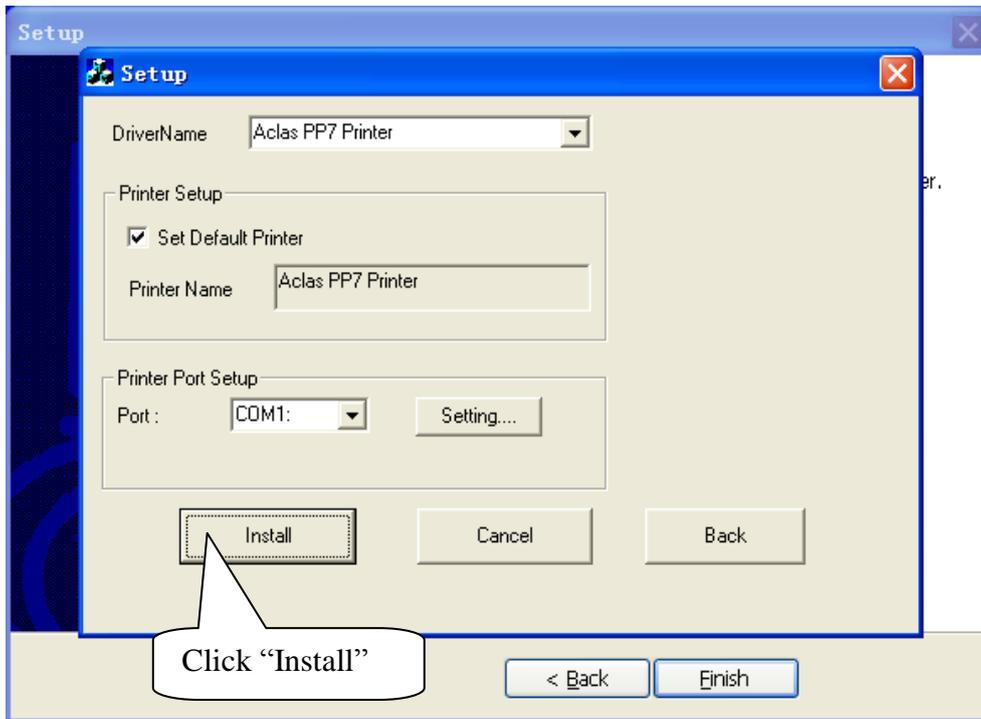



## 1.1.2. USB Printer Driver Installation

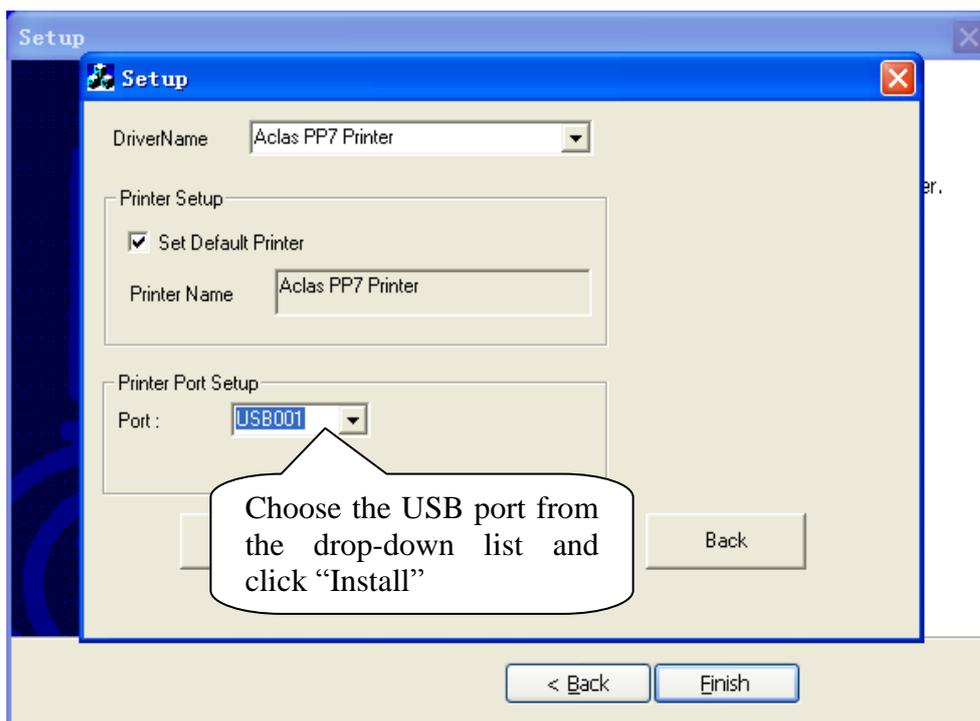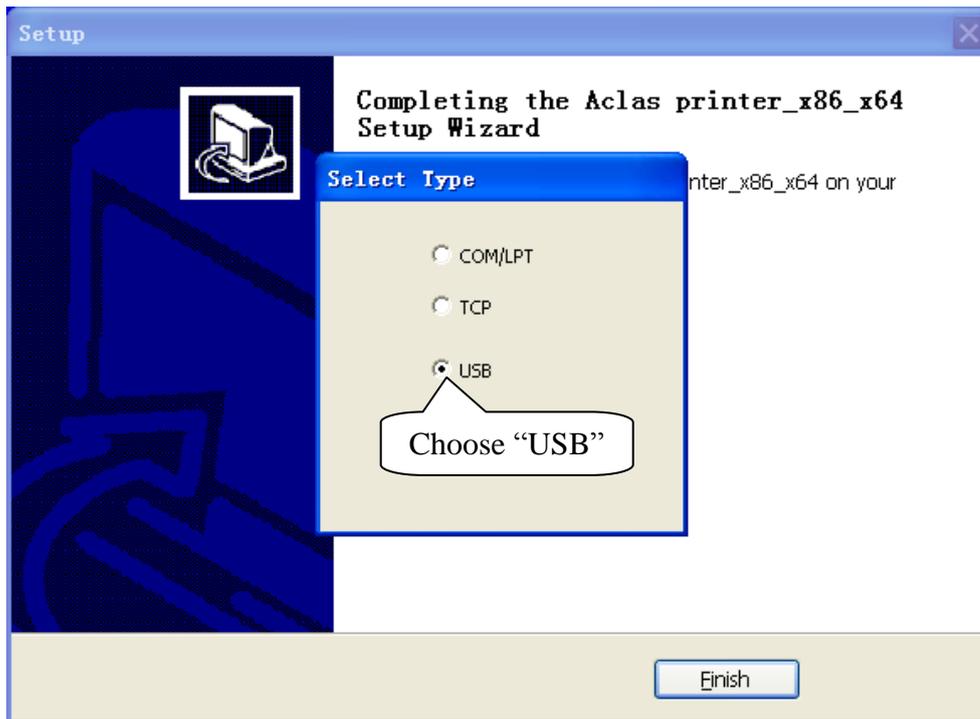

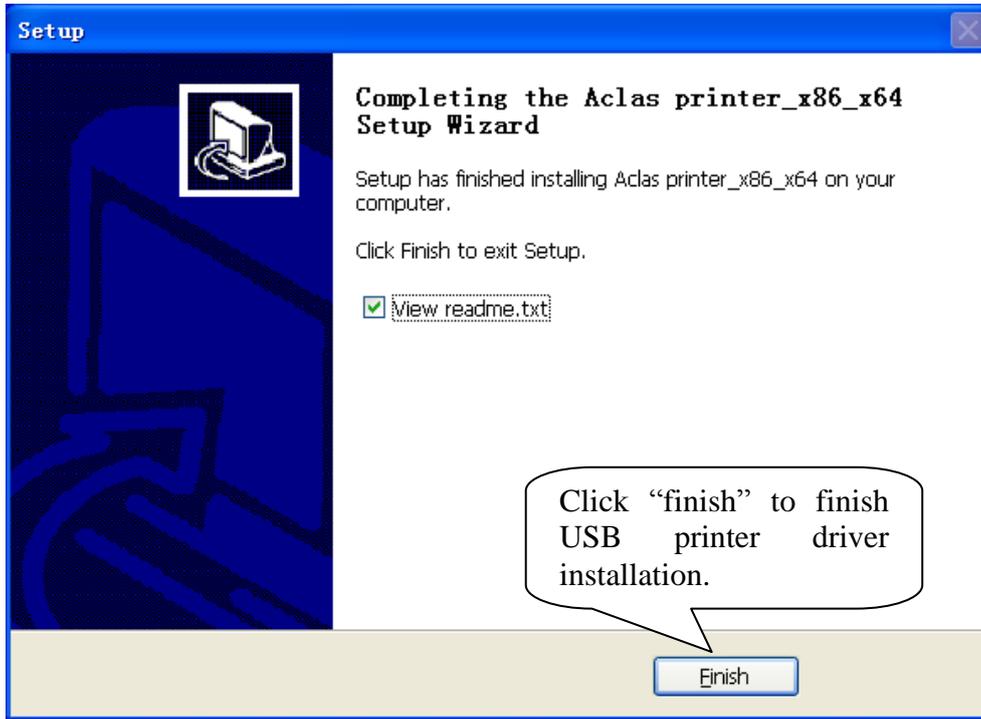

### 1.1.3.Ethernet/WIFI Printer Driver Installation

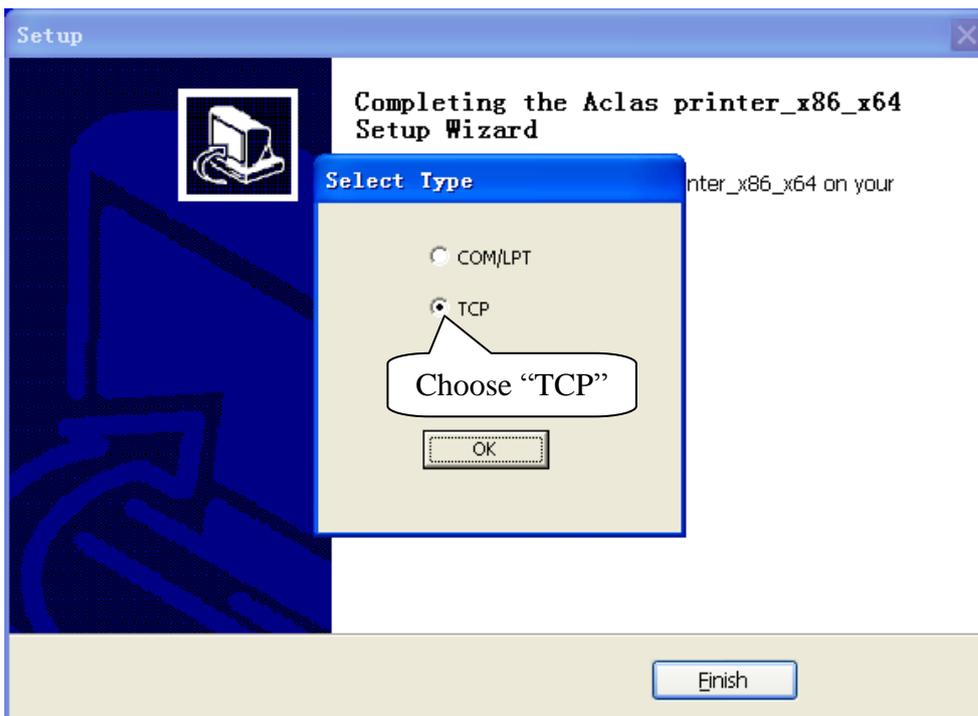

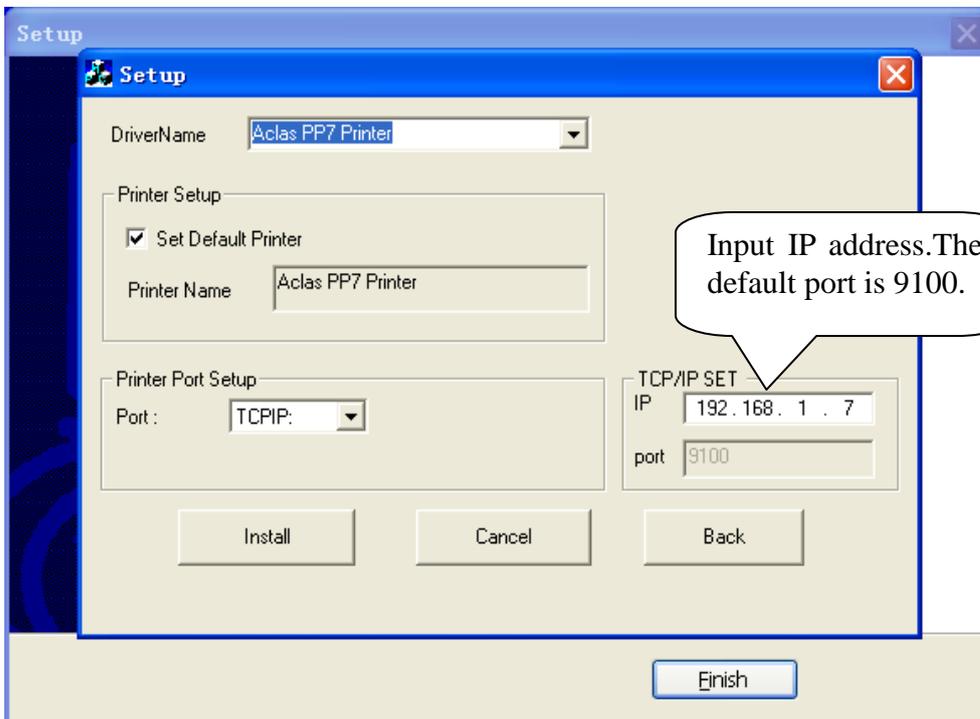



**Note:**



**After installing the printer driver, you can use the printer. If the printer could not work, you can refer to Chapter 1.2 to see the connecting port and make sure that the connecting port you choose is correct and is not being used; then refer to Chapter 1.3 to configure port.**

### **1.1.4.USB port convert to serial port Printer Driver Installation**



Note: if customer's PC does not support USB printer function ,the function of the USB port convert to serial port is needed. The detail operation steps are as followings:

- 1) First you need to install USB port convert to serial port driver programme. Please read the readme text before installation, because different computer systems use different driver programme, so you need to follow the readme text to choose the correct driver programme and add the suitable documents to relevant contents. The installation steps are as followings:

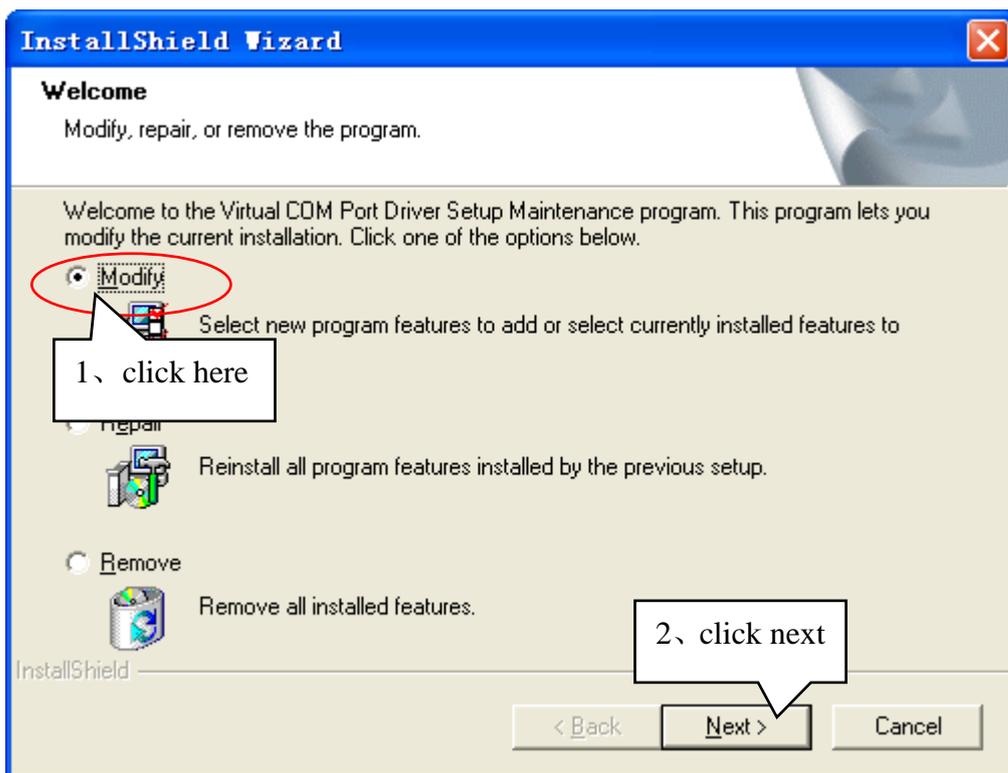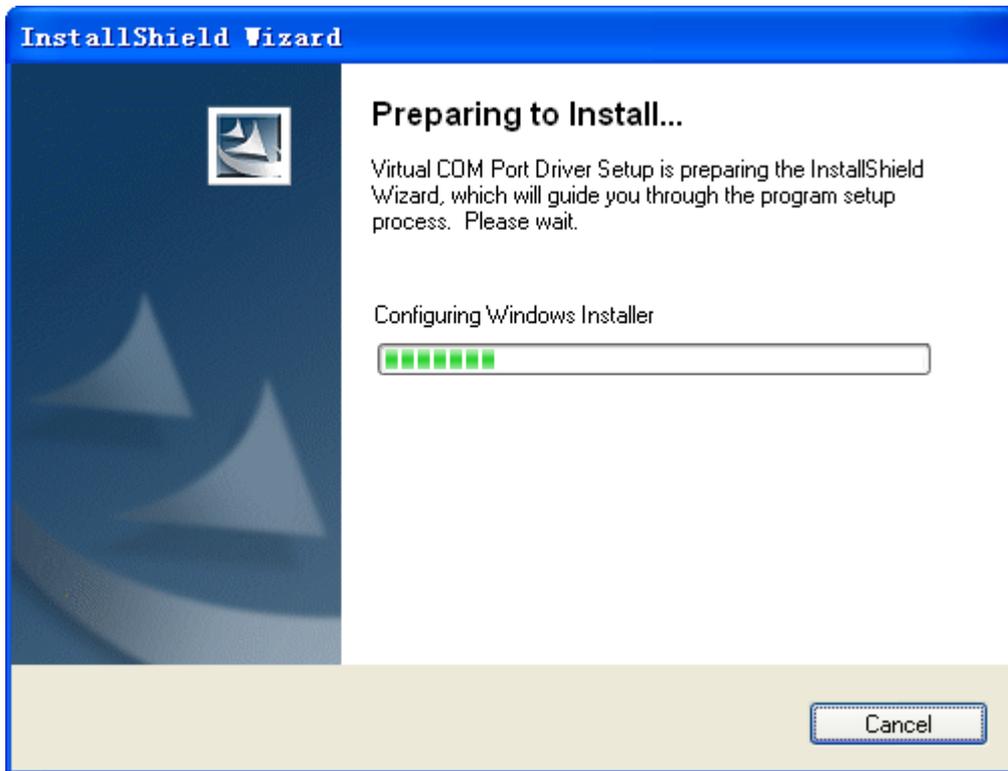


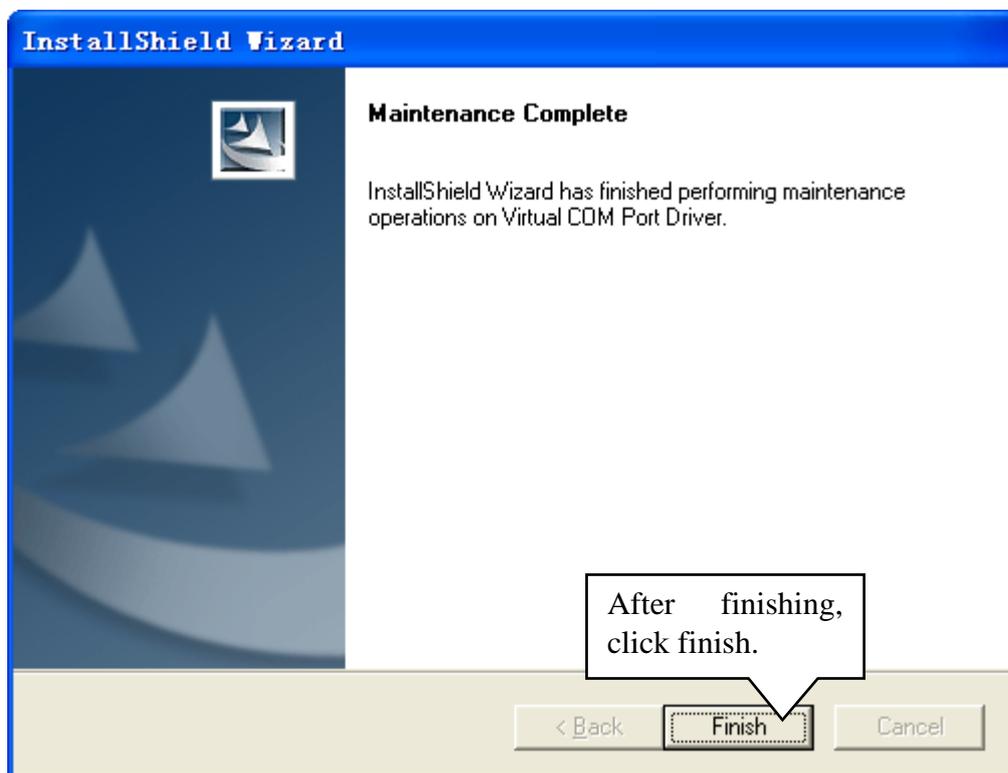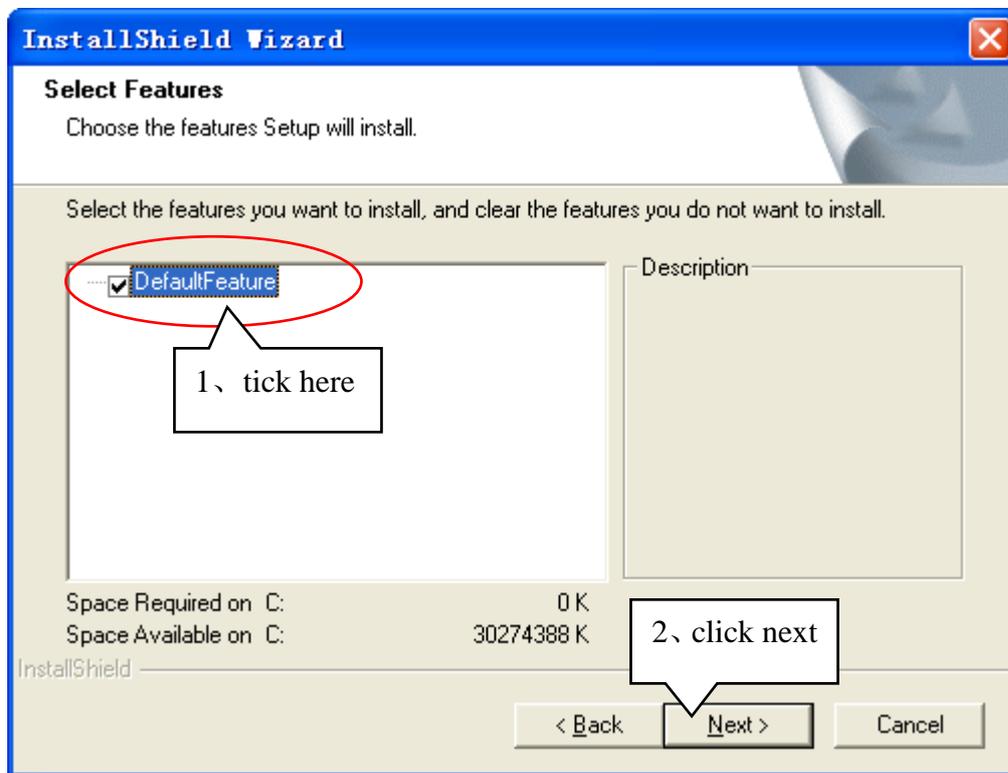

2) Open printer tool ,the system will pop-up the following interface:

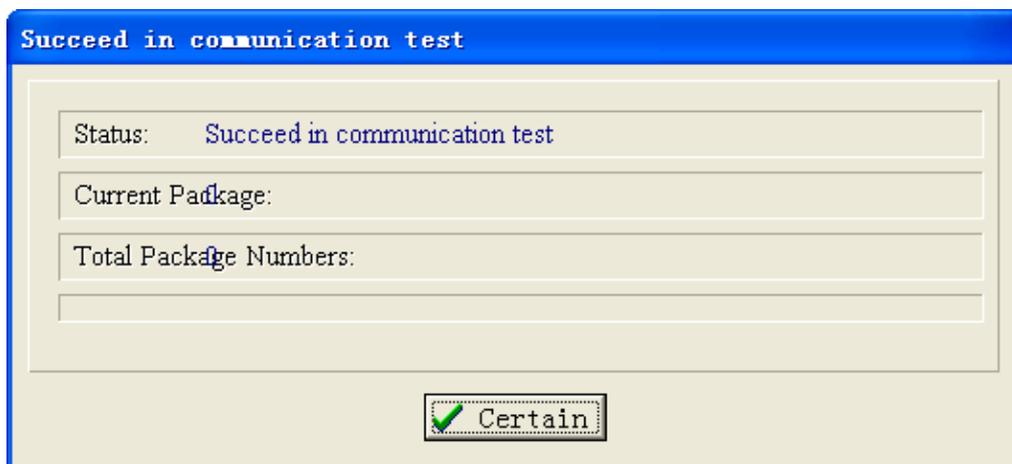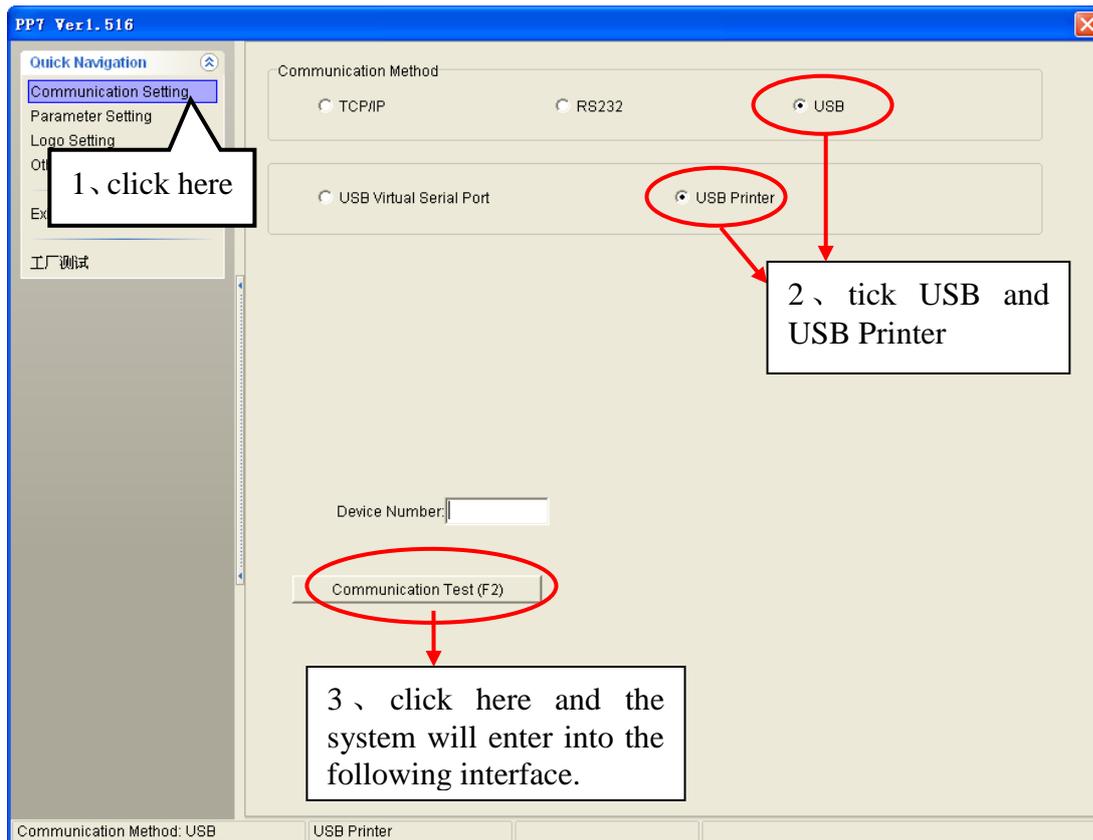


3) Click “certain” and choose “parameter setting”,enter into the following interface:

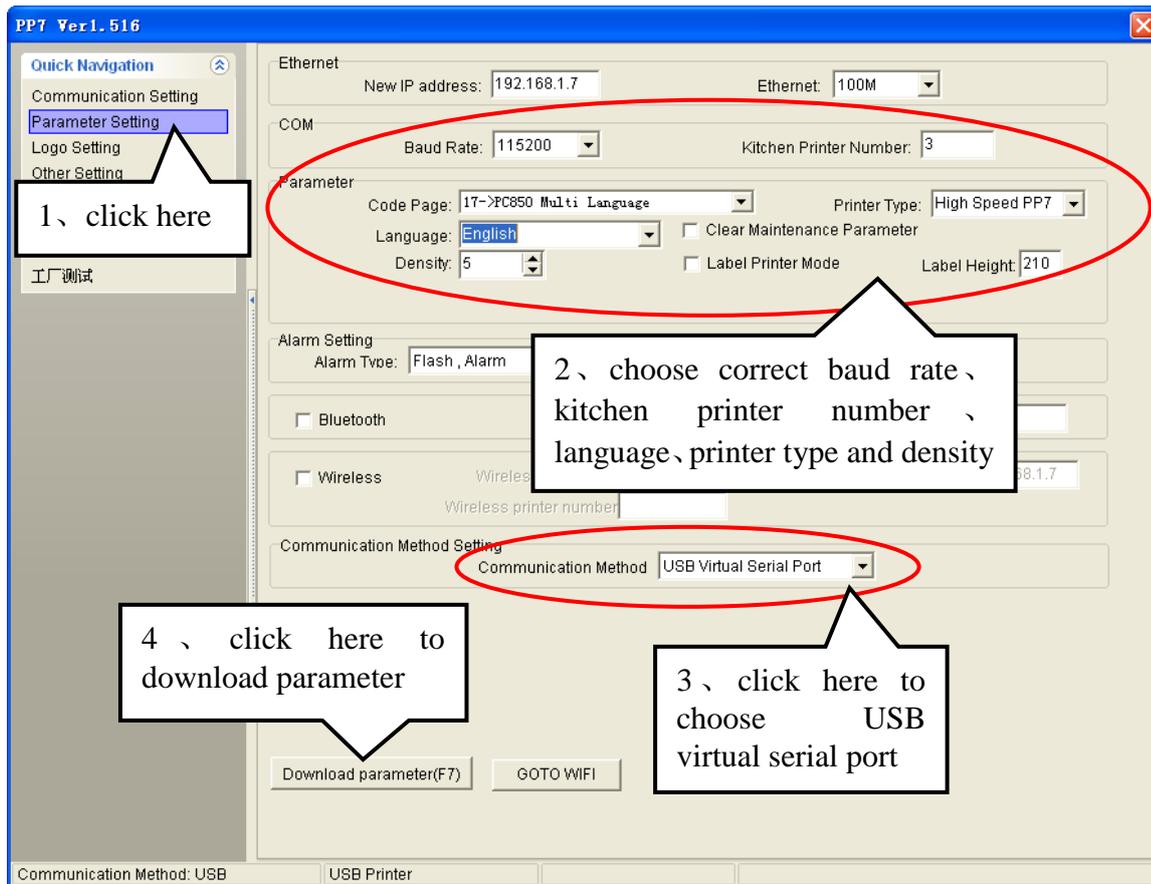


4) After finishing downloading ,the system will show the following interface:





5) Back to the computer desk, right click “my computer” and choose “device manage”, if the following picture can be seen , it means that the operation succeed.

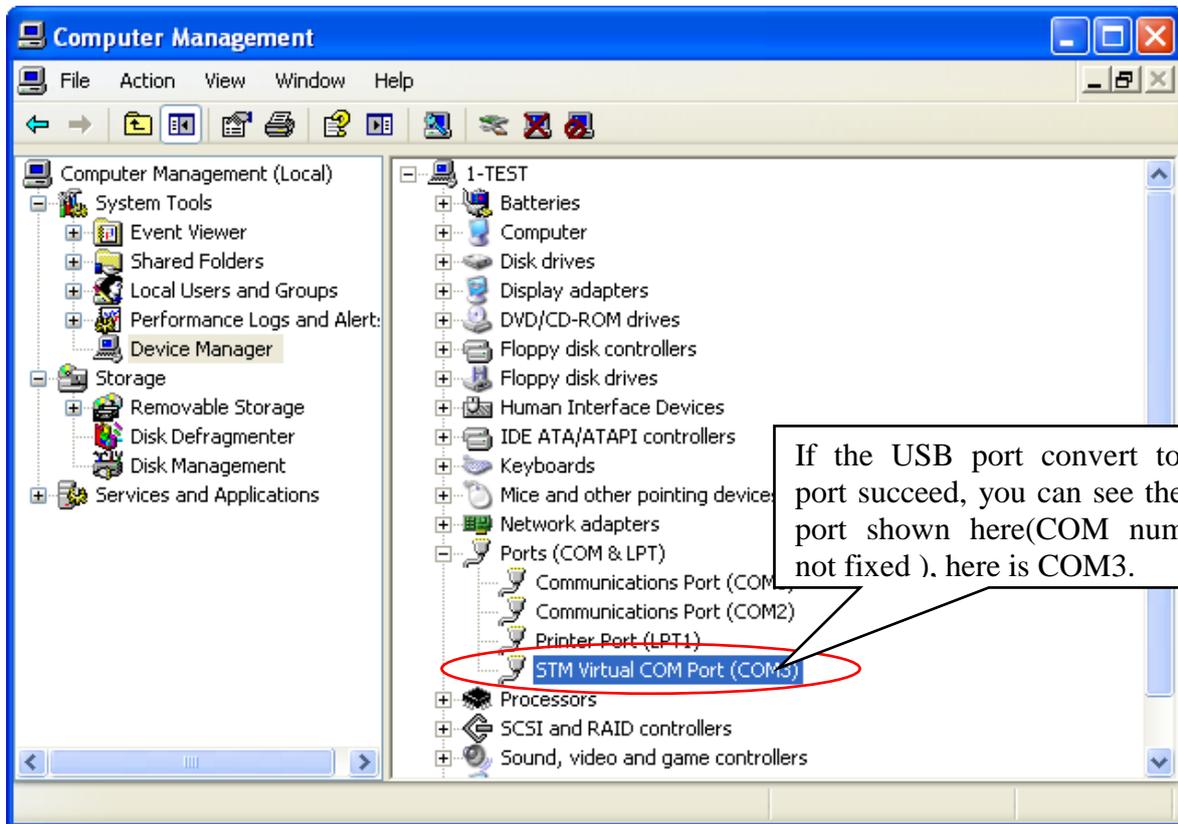

- 6) Open “printer and fax” in the control panel of computer, choose “ Aclas Printer” printer device, right click the mouse → property → port ,choose COM3 , and click apply。

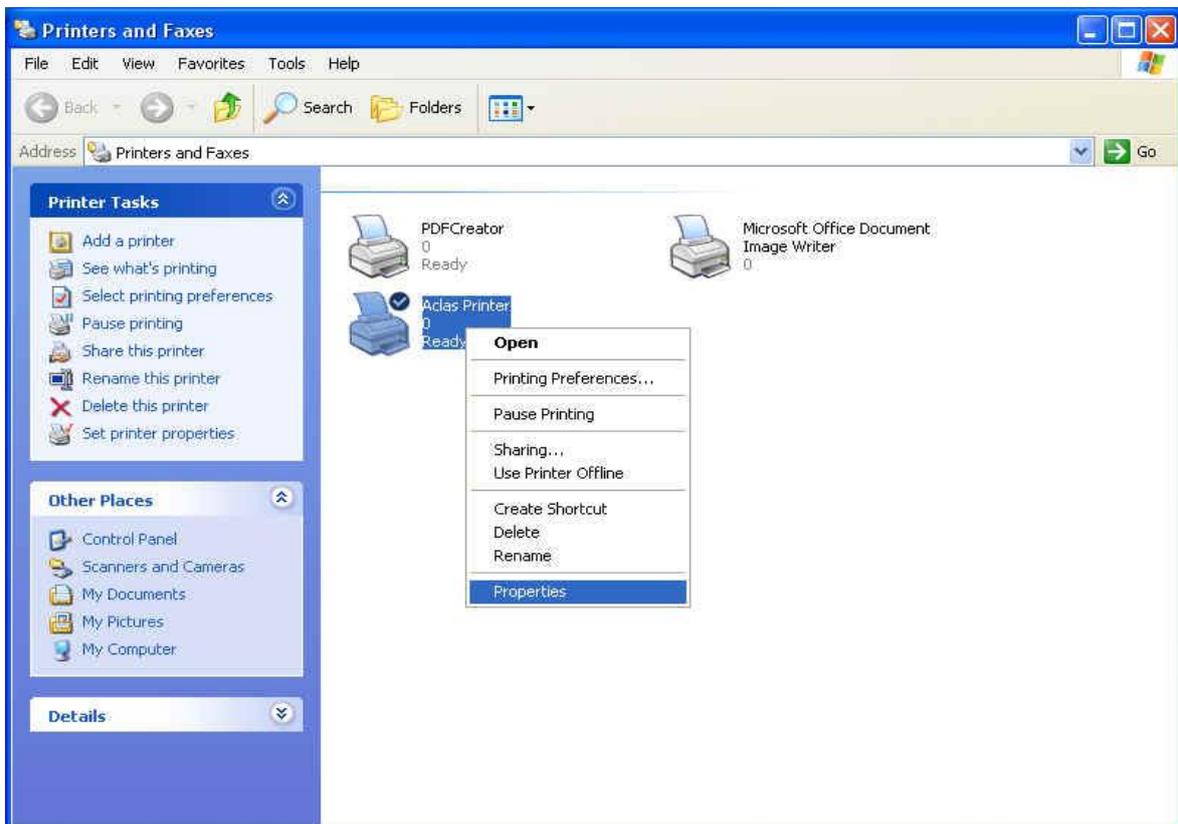

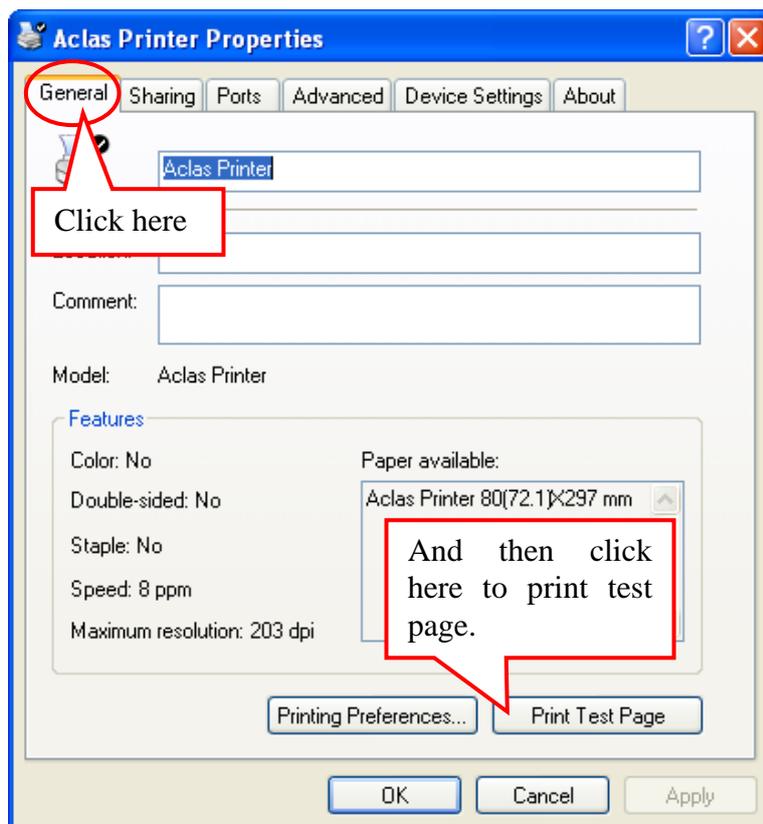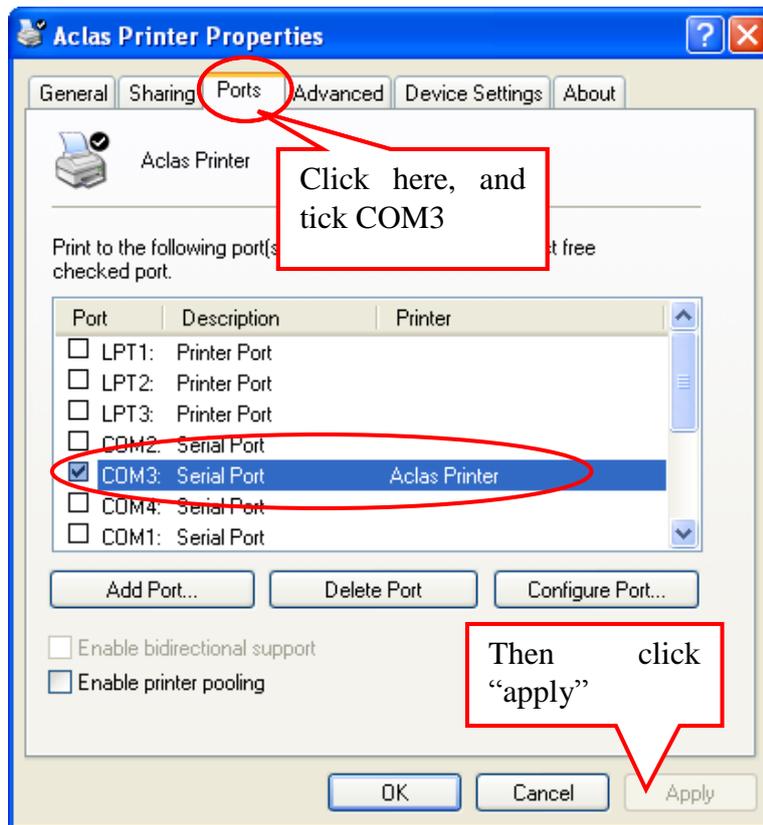



恭喜!

如果您可以读取这个信息, 则说明 Aclas Printer 在 TEST-CYM 上的安装是正确的。

以下信息描述打印机驱动程序和端口设置。

提交时间: 10:35:08  
2014-11-19  
计算机名:  
TEST-CYM  
打印机名:  
Aclas Printer  
打印机型号:  
Aclas Printer  
彩色支持: 否  
端口名:  
COM8:  
数据格式: RAW  
共享名:  
位置:  
注释:  
驱动程序名:  
UNIDRV.DLL  
数据文件:  
Aclas.gpd  
配置文件:  
UNIDRVUI.DLL  
帮助文件:  
UNIDRV.HLP  
驱动程序版本号:  
6.00  
环境:  
Windows NT x86

这个驱动程序所用的其他文件:

C:\WINDOWS\System32\

C:\WINDOWS\System32\  
(5.1.2600.0 built  
by: WinDDK)

C:\WINDOWS\System32\

C:\WINDOWS\System32\

C:\WINDOWS\System32\



C:\WINDOWS\System32\



这是打印机测试页的  
结尾。

Note: there is the information about computer name\ printer name\port name and data file etc. on the print test page. The printer can be used after finishing the installation of driver , but if the printer cannot be used normally, please refer to chapter 1.2 and chapter 1.3.

If you want to return to use USB function, you can follow the following steps:

First, insert serial cable into the computer, click “my computer ” and choose “device manager”, find the port number( note: port number should be the same as the one that shown on the computer), here the COM port is COM3

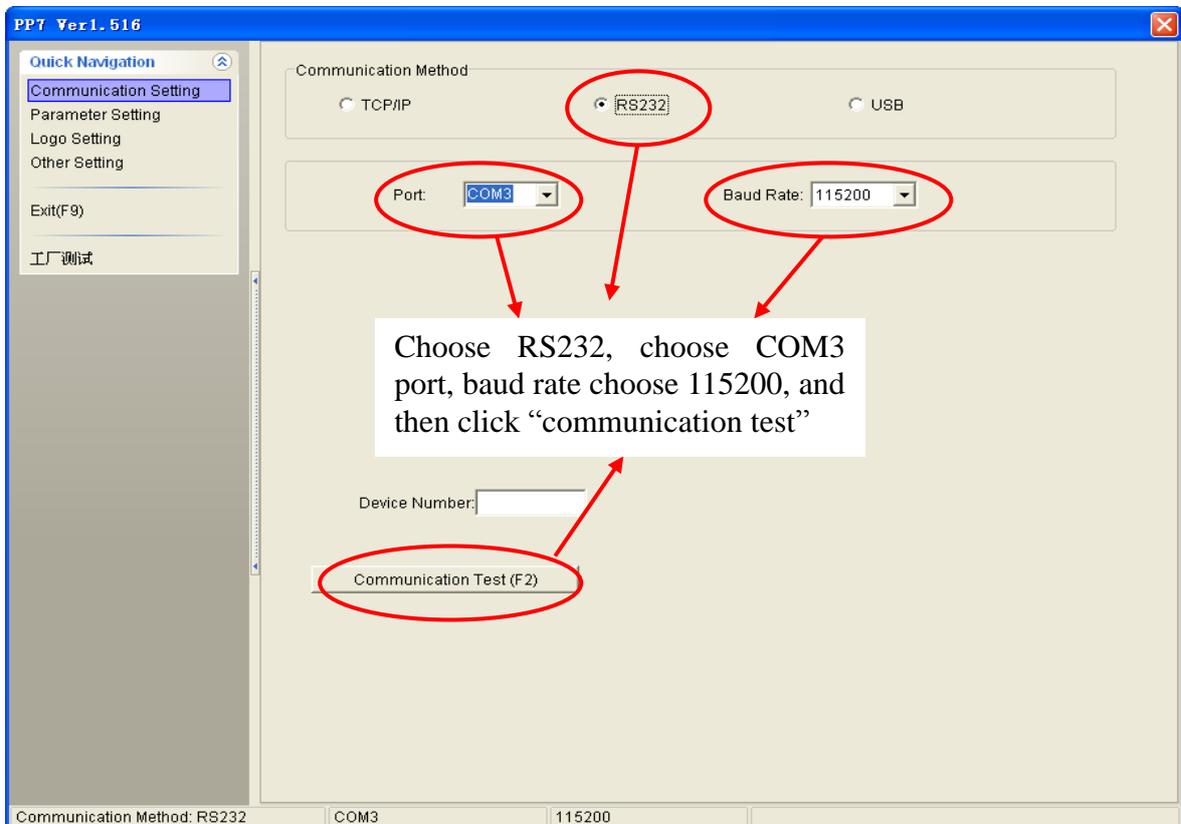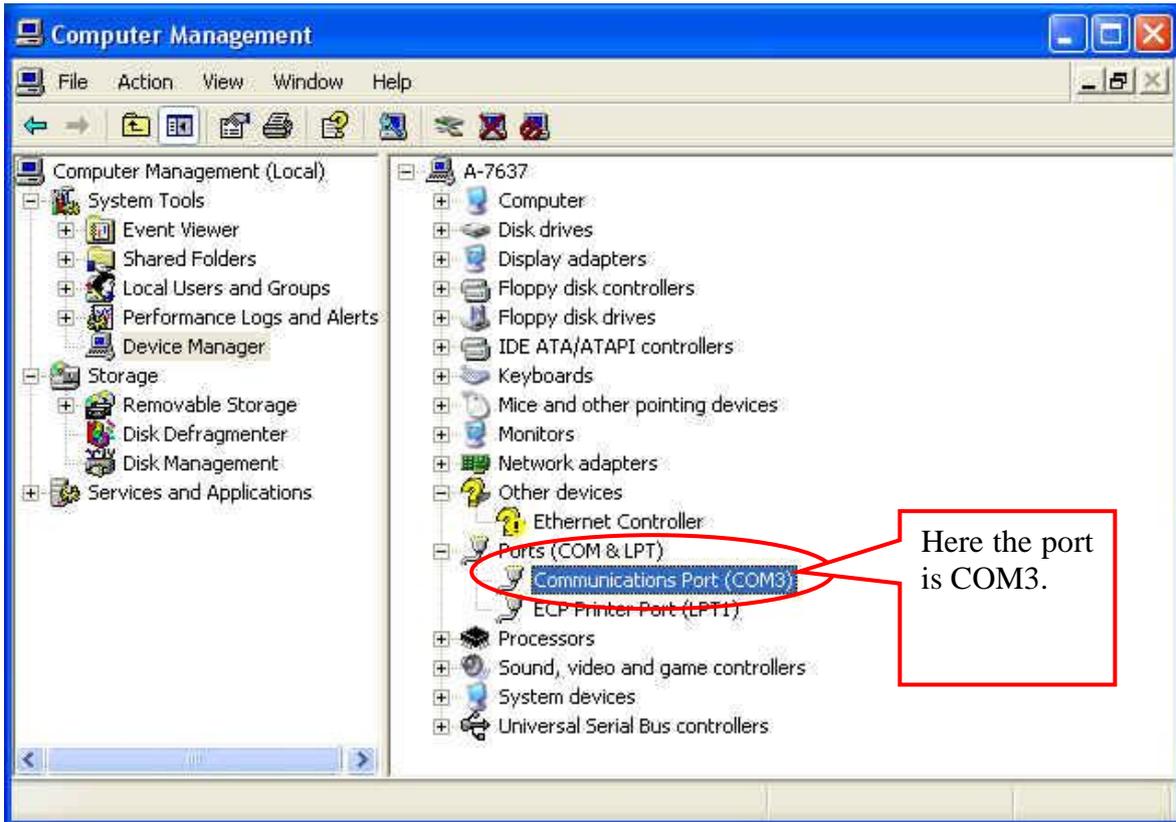

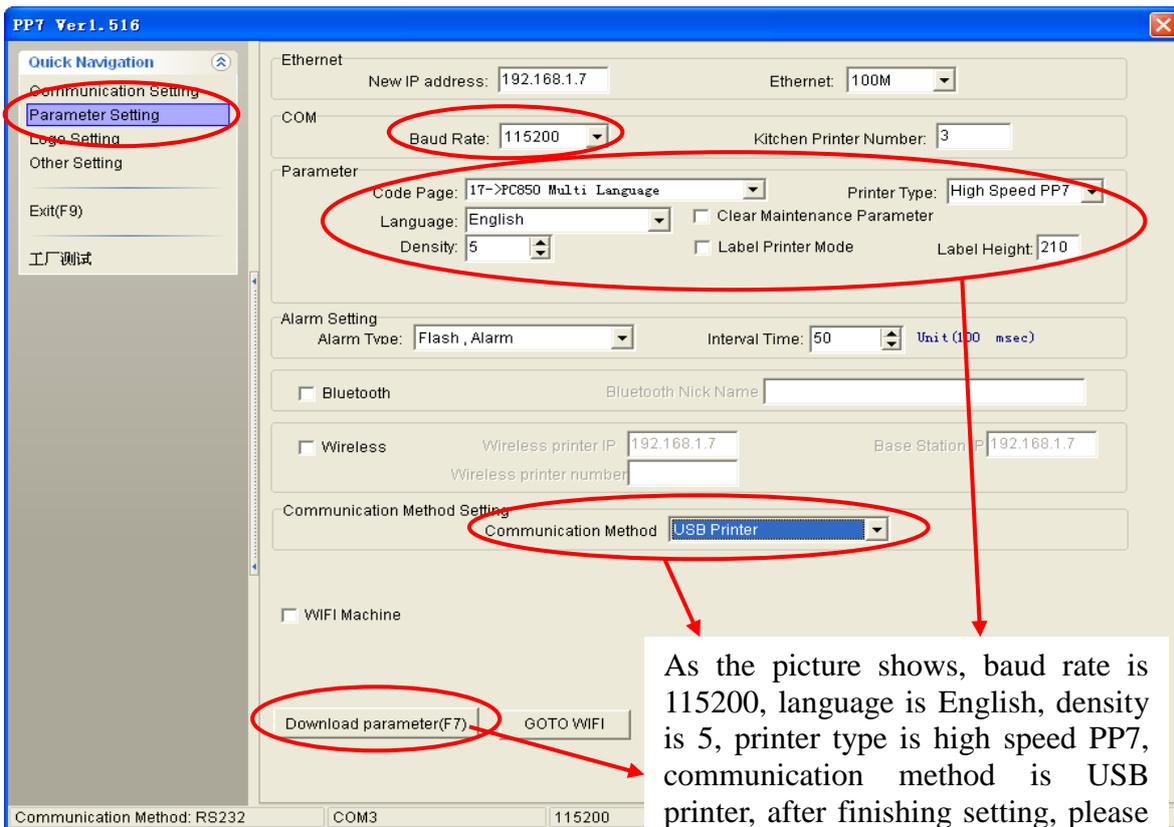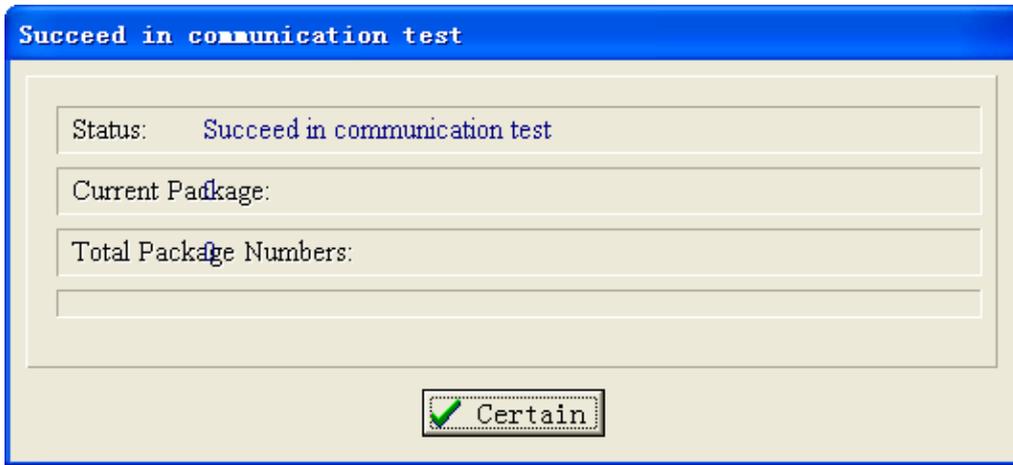




As the picture shows, baud rate is 115200, language is English, density is 5, printer type is high speed PP7, communication method is USB printer, after finishing setting, please click download parameter.




According to the prompts, the printer will give a hint after the success of downloading, and then the printer will restart automatically. Finally, you can insert the USB, at that time, the function of printer USB can be reused again.

## 1.2. How to Know The Connect Port


Connect the PP7X to the computer, follow steps below to know which port is connected. Right click 'My Computer' icon on the desktop, and choose 'Manage':

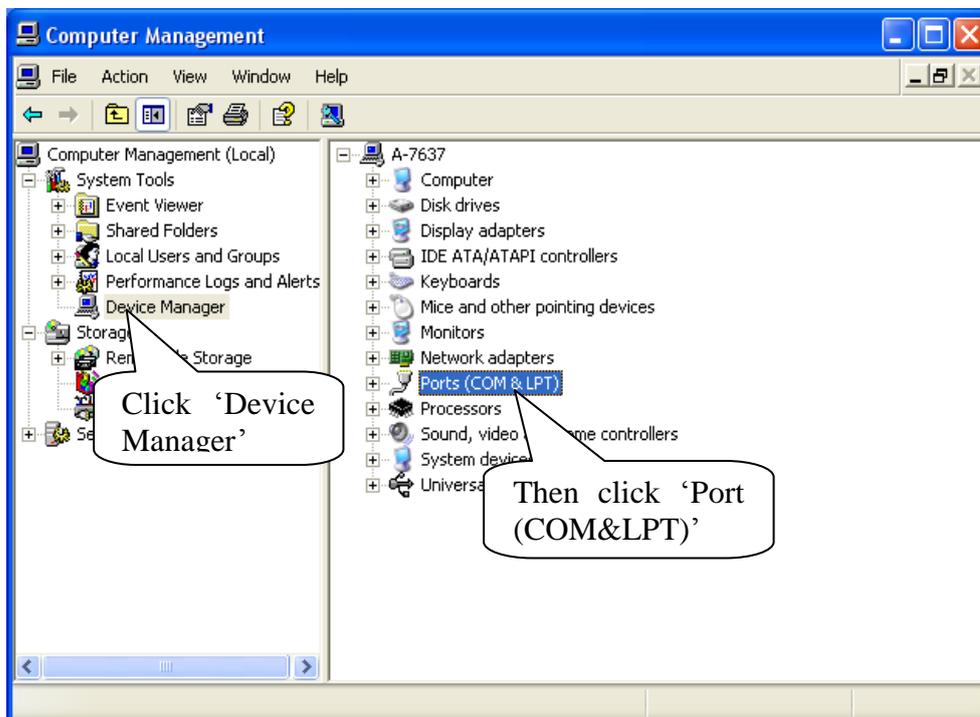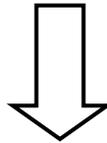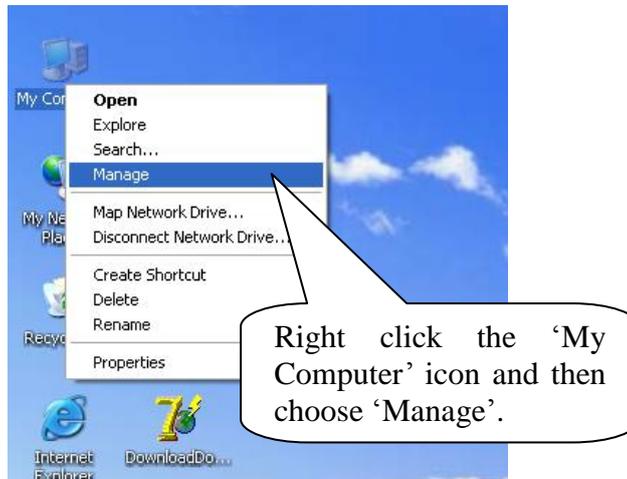


Serial printer connect port:

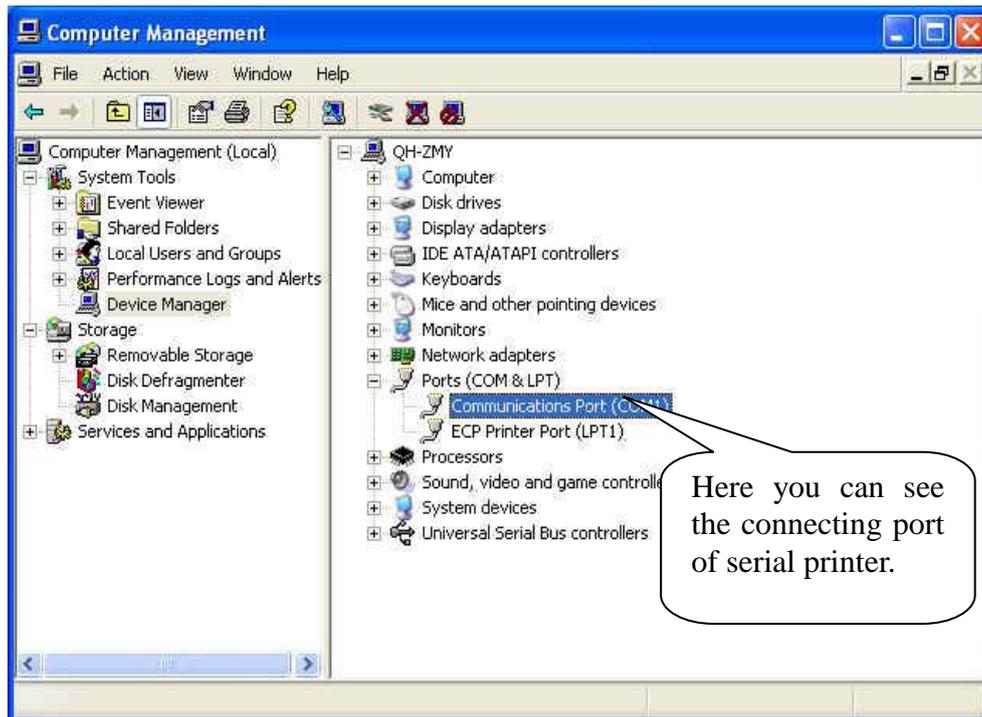

Parallel printer connect port:

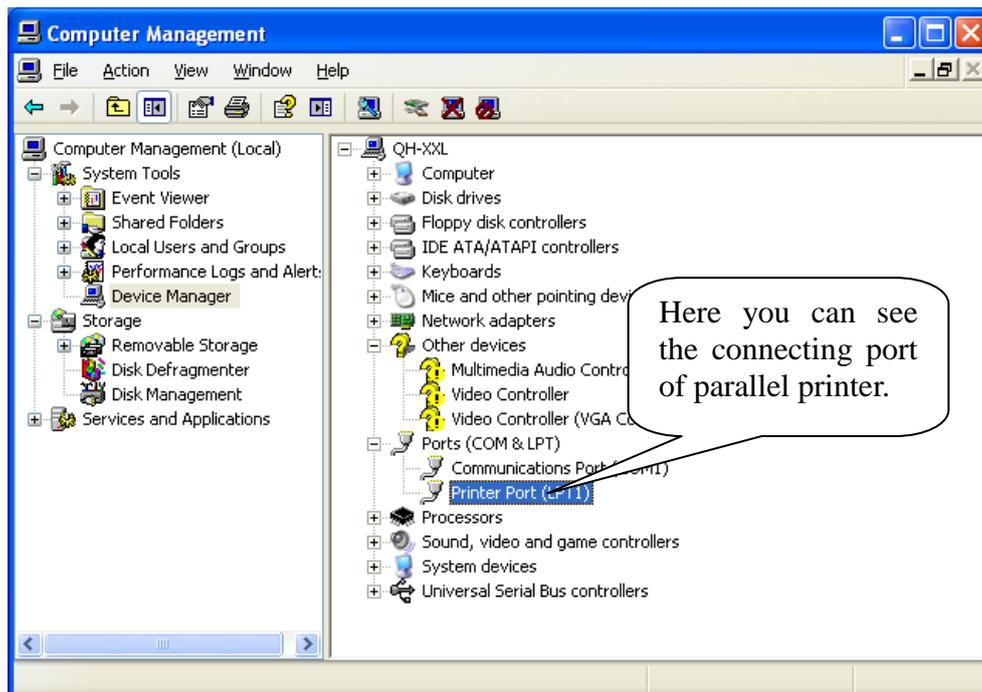


USB printer connect port:

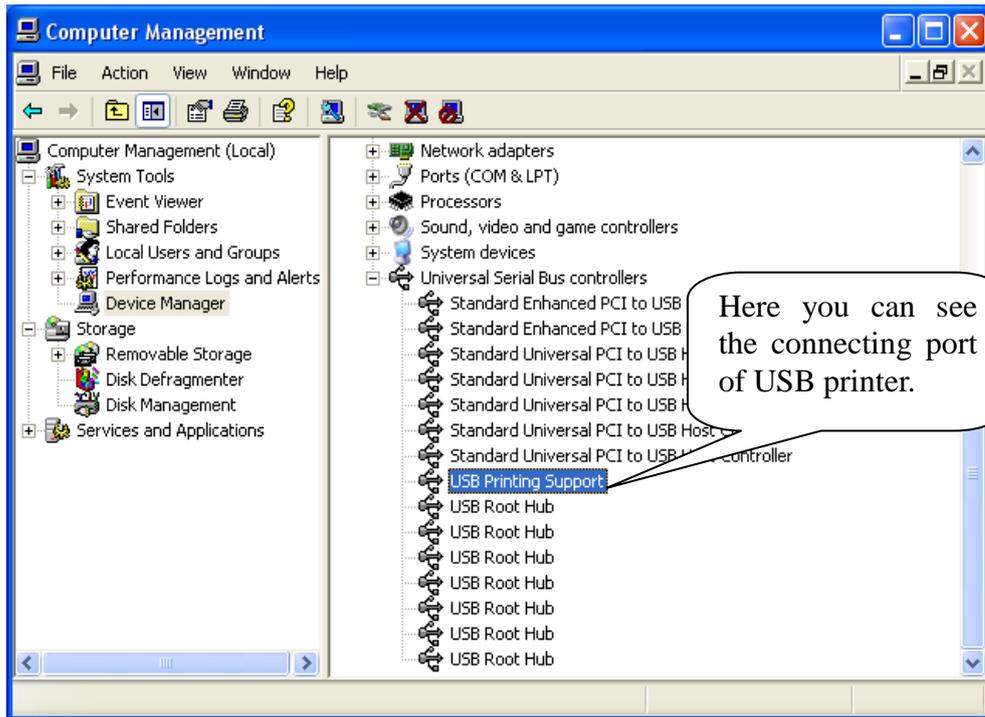


### 1.3. How to Config Connect Port



**Step1: Enter 'properties' interface of the printer first to configure port after knowing the connecting port.**


- If your PC is installed with Windows XP system, please follow the below steps to enter 'properties' interface of the printer.

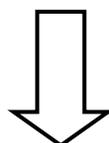

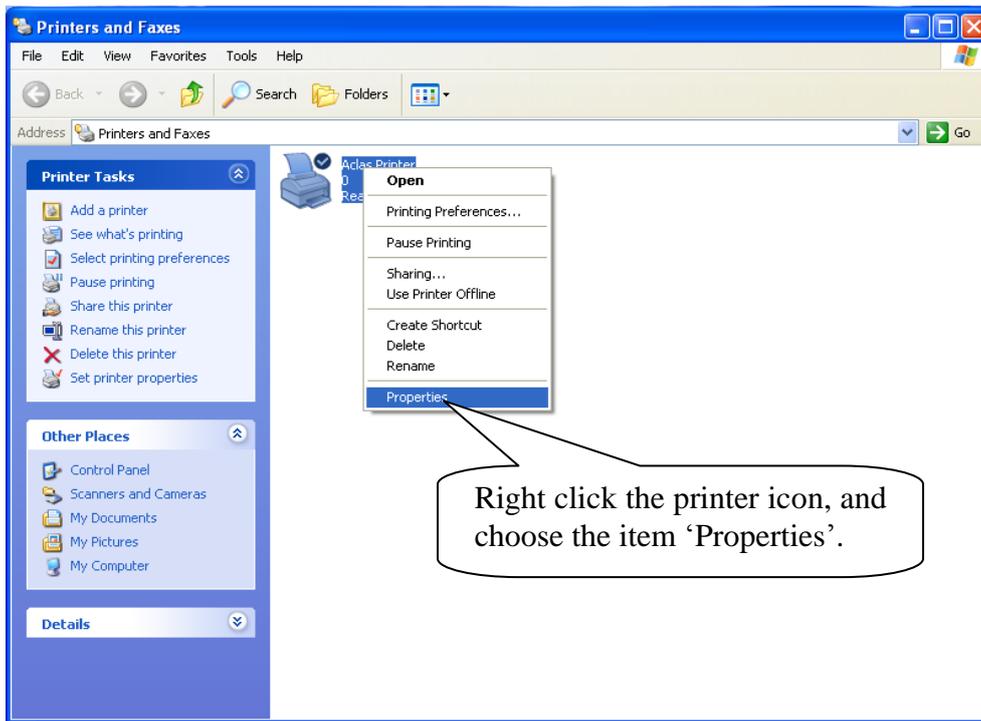


- If your PC is installed with Vista system, please follow the below steps to enter 'properties' interface.

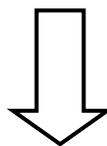
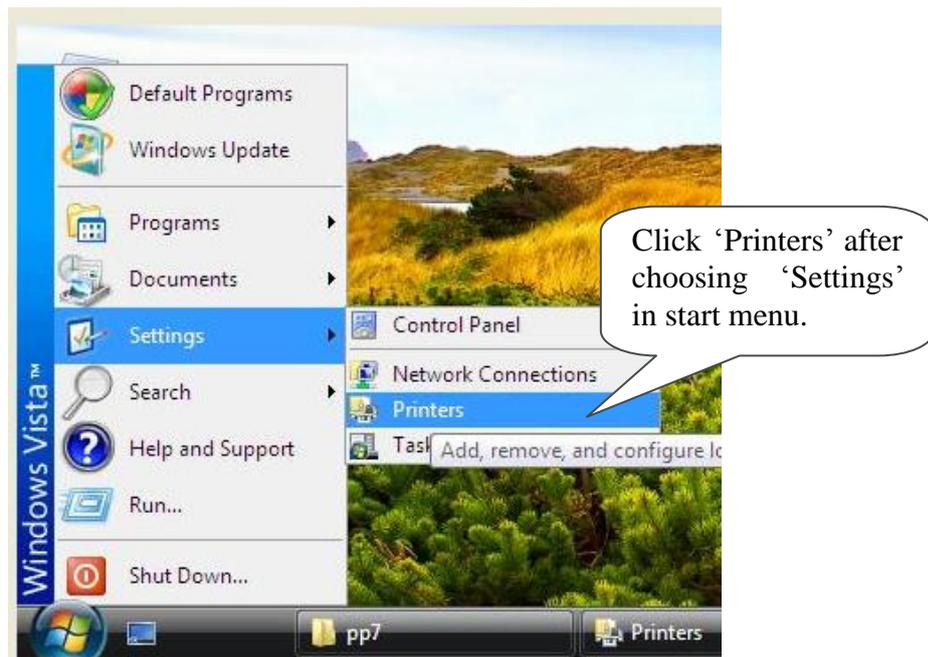


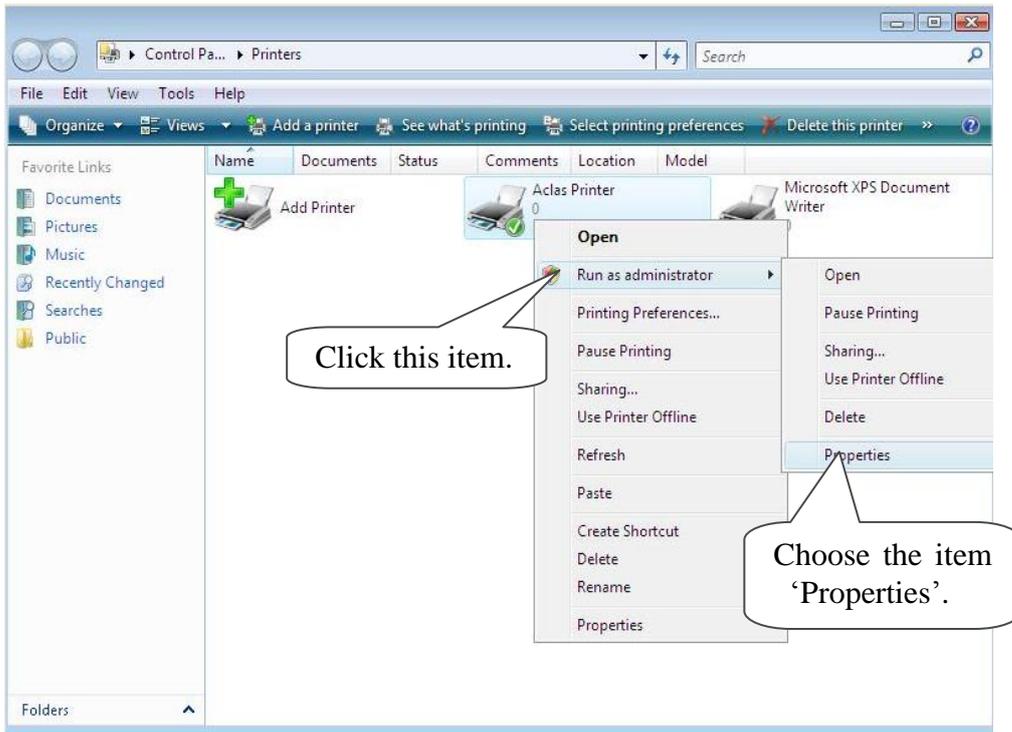

**Note: If you are not allowed to access to run as the administrator, please choose the item 'properties' directly after entering the Printer interface, as the window below:**

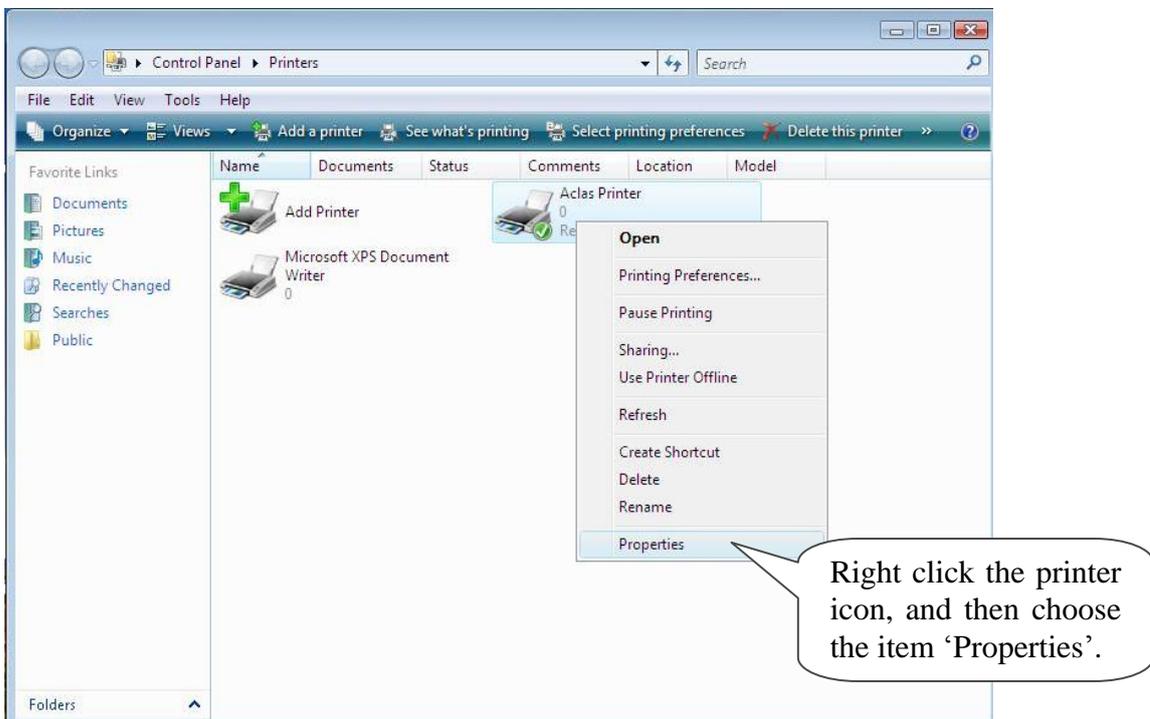


- If your PC is installed with WIN7 system, please follow the below steps to enter ‘properties’ interface.

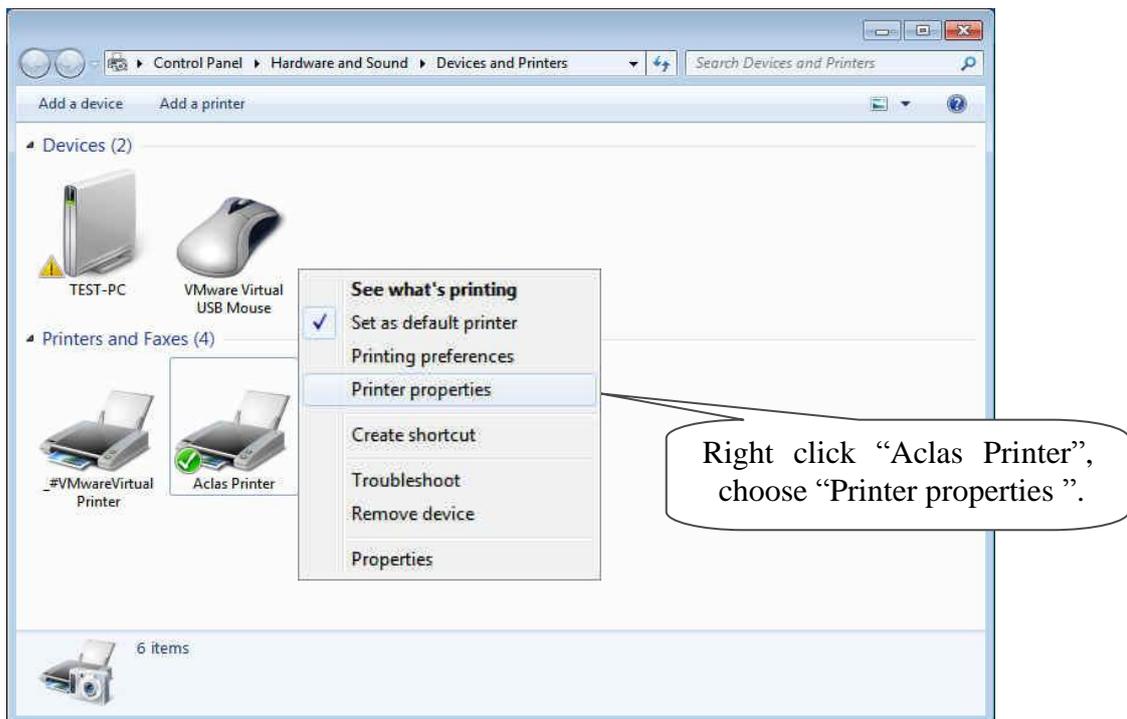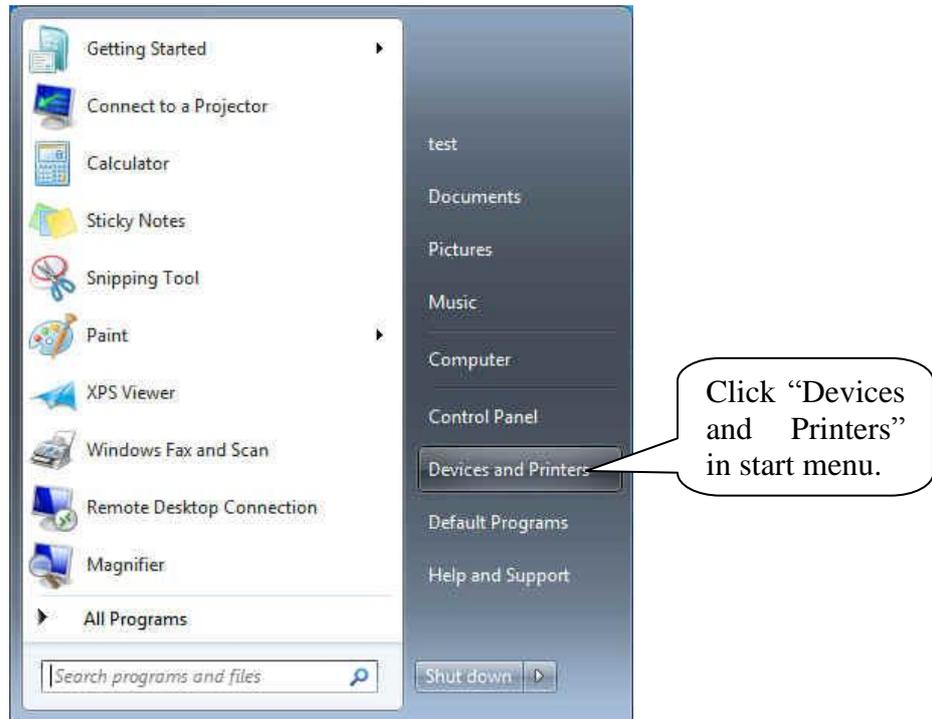


## Step 2: Choose connecting port


Choose the connecting port that you have known from Chapter 1.2. For example, the connecting port of the USB printer known from Chapter 1.2 is COM3, so you should choose COM3 in the following interface. Take the port configuration of USB printer in Windows XP system as an example:

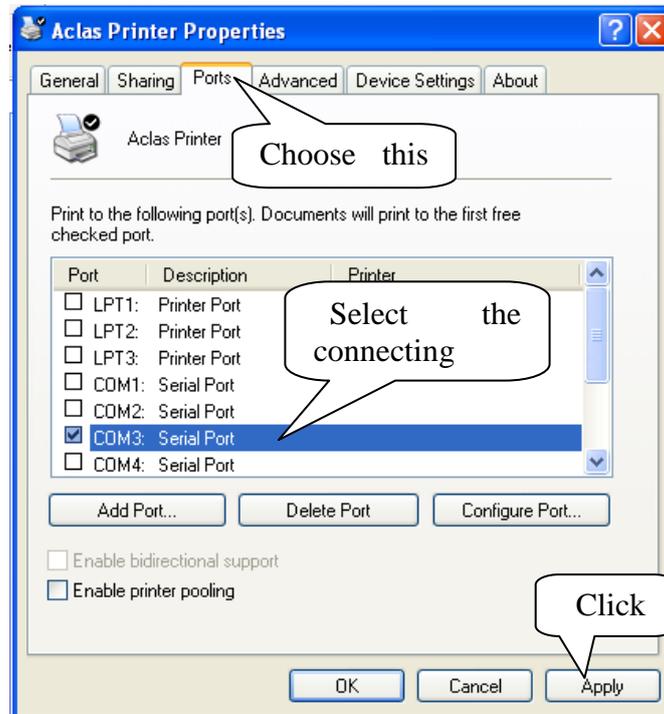


## Step 3: Configure port

**Note: Parallel printers and USB could skip this step, and go to step 4 directly.**

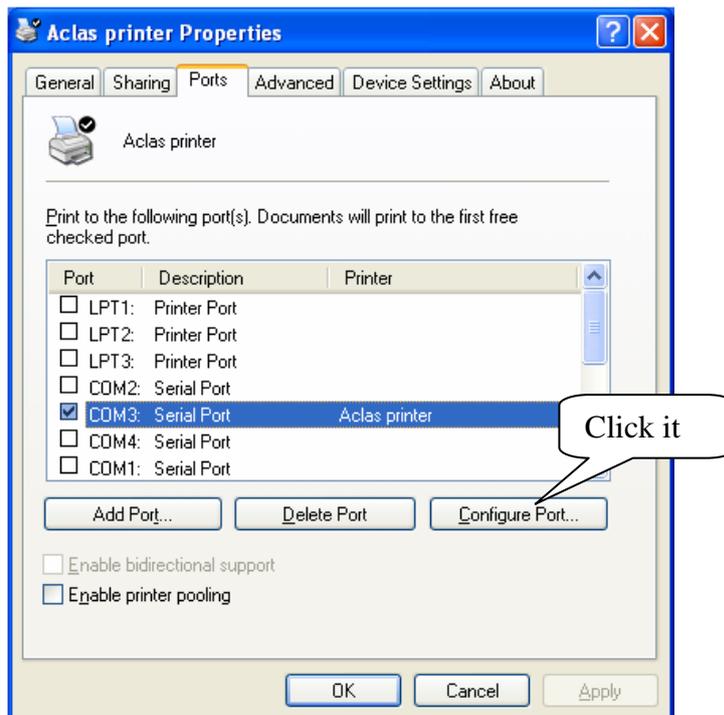

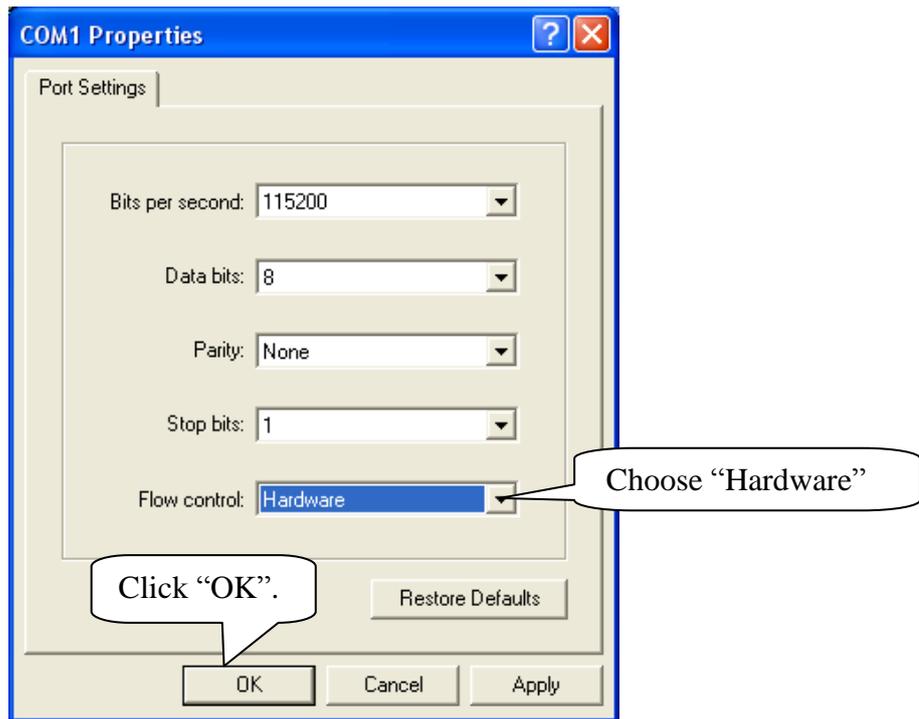

#### Step 4: finish port configuration



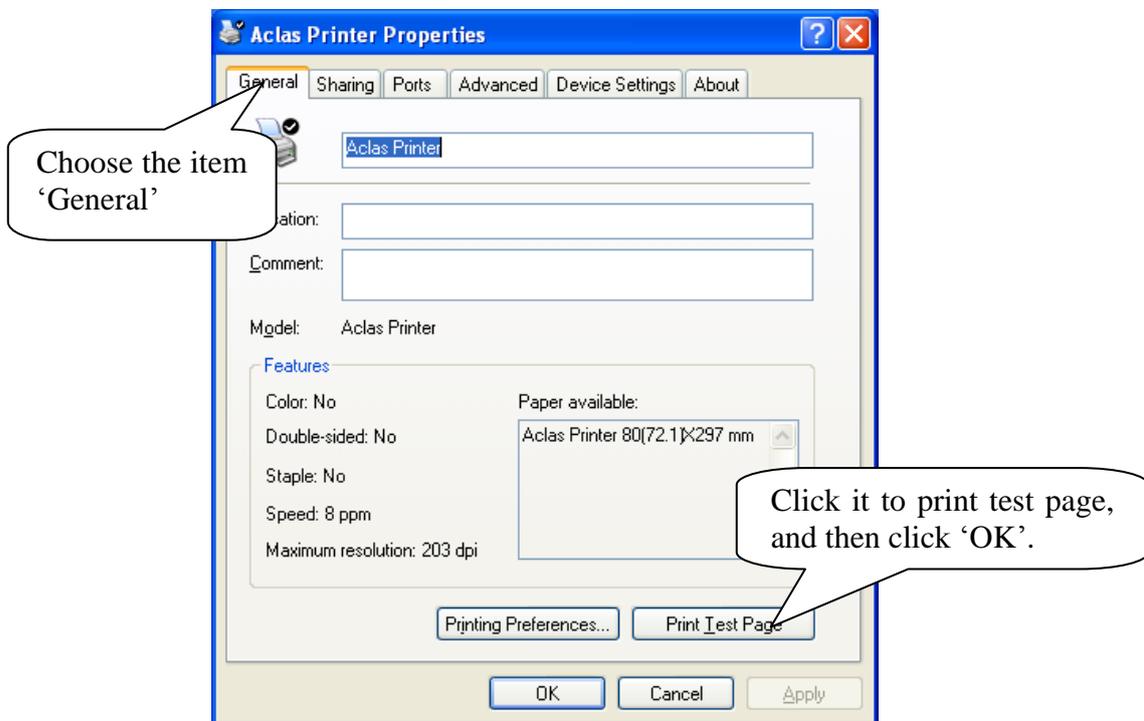






## 2. BT Printer Driver Installation



The communication distance of PP7 blue tooth printer is up to 10m without obstacle.

### 2.1. BT Printer Driver Installation

Connect the PP7X to PC, double click the file 'Aclas printer.exe' in the folder 'Aclas Printer' to install the printer driver.

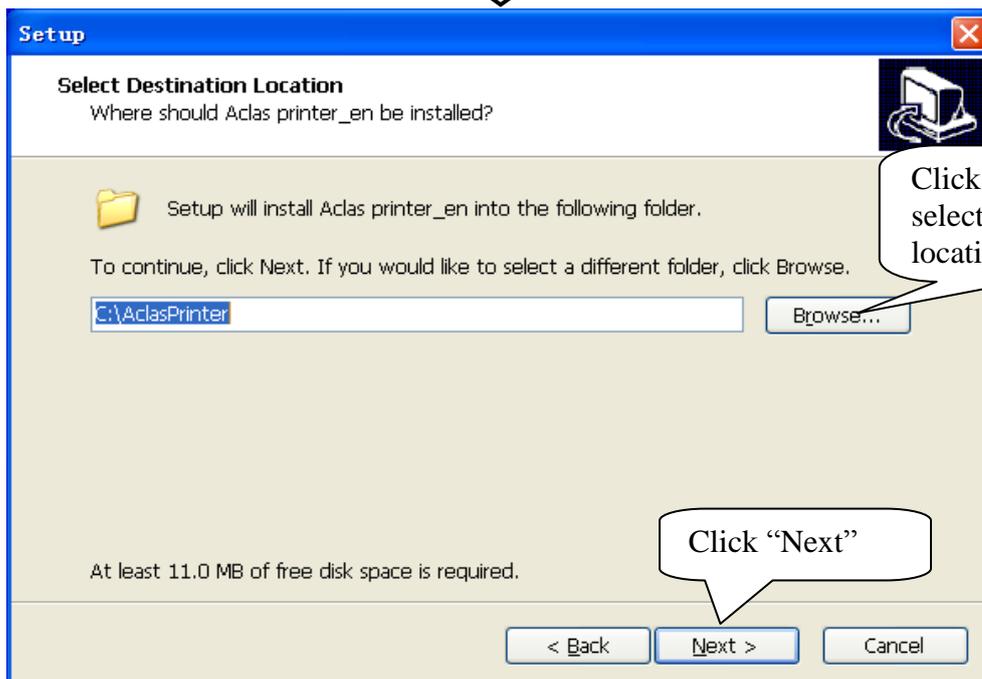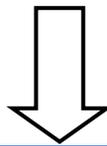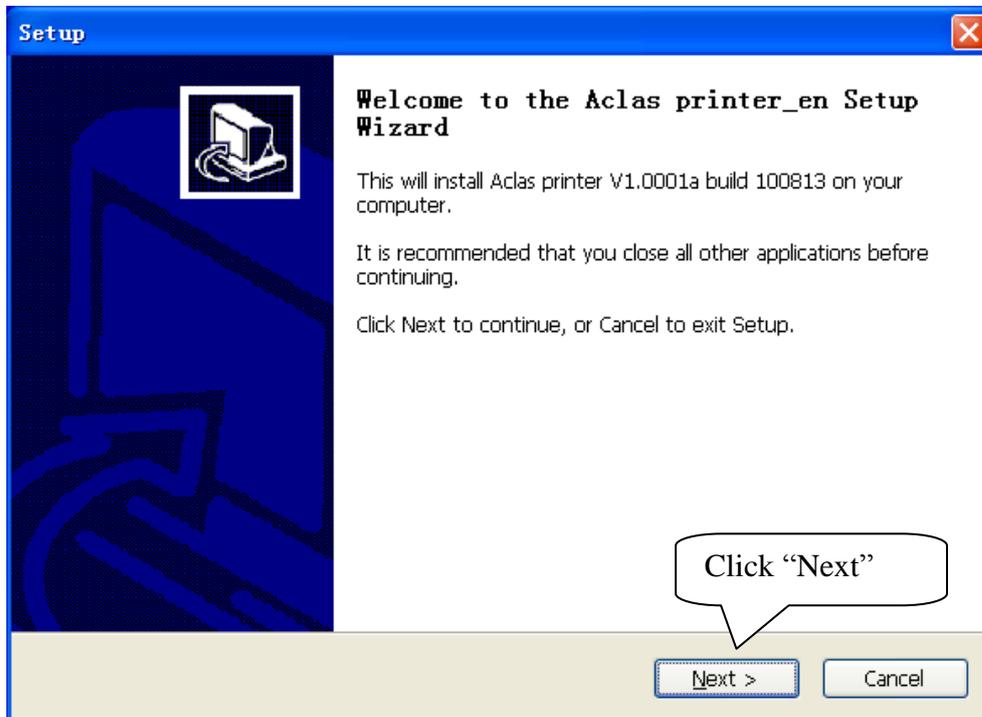

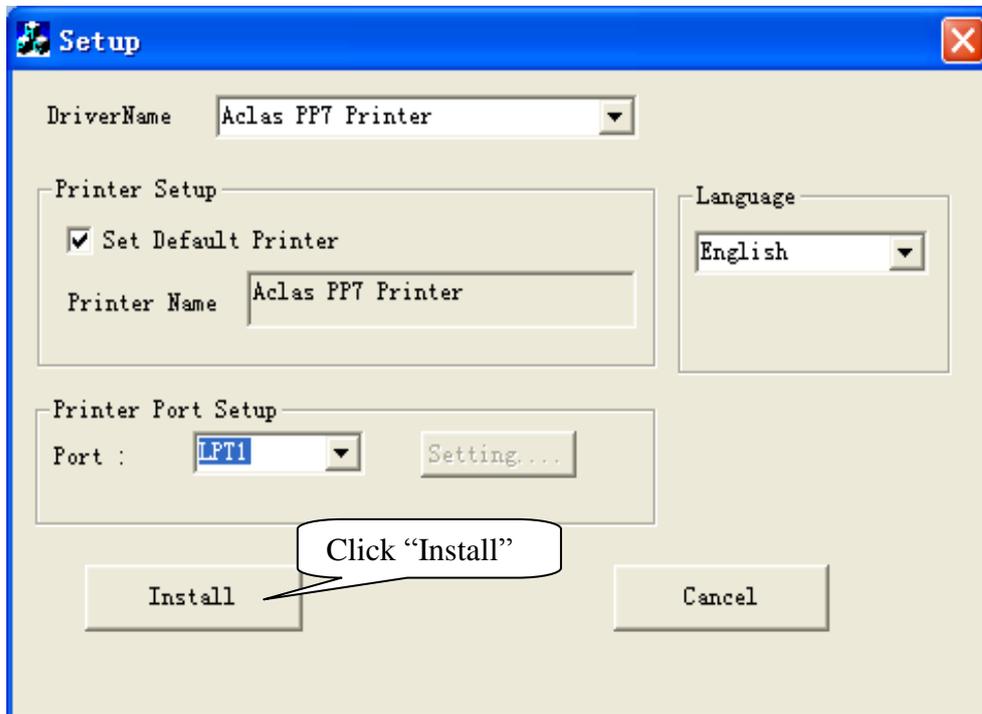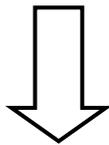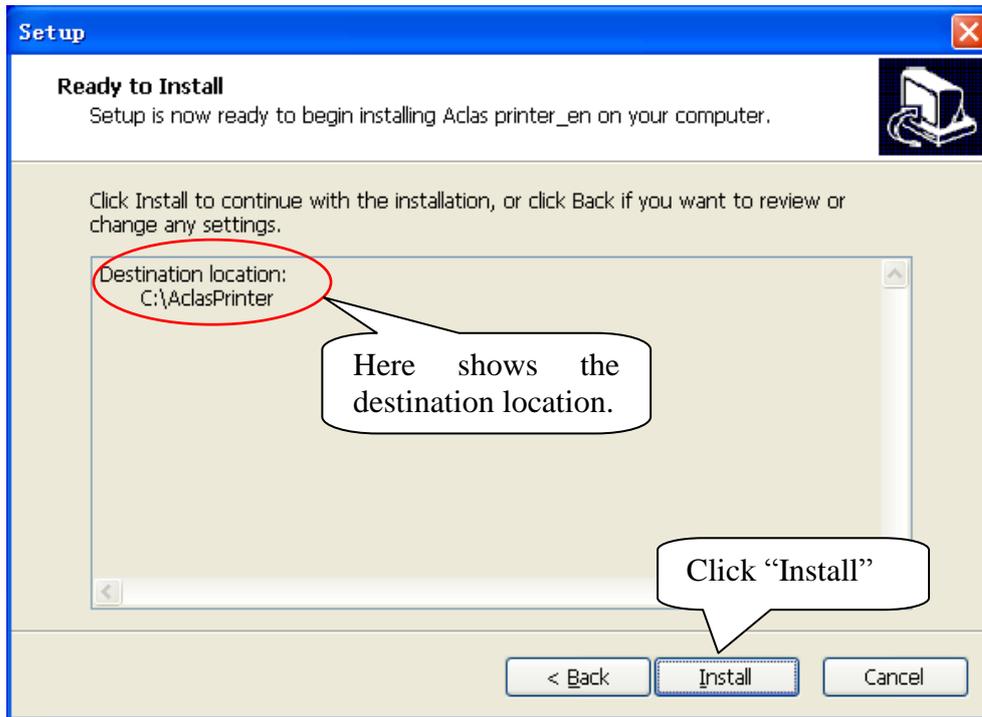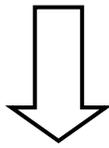

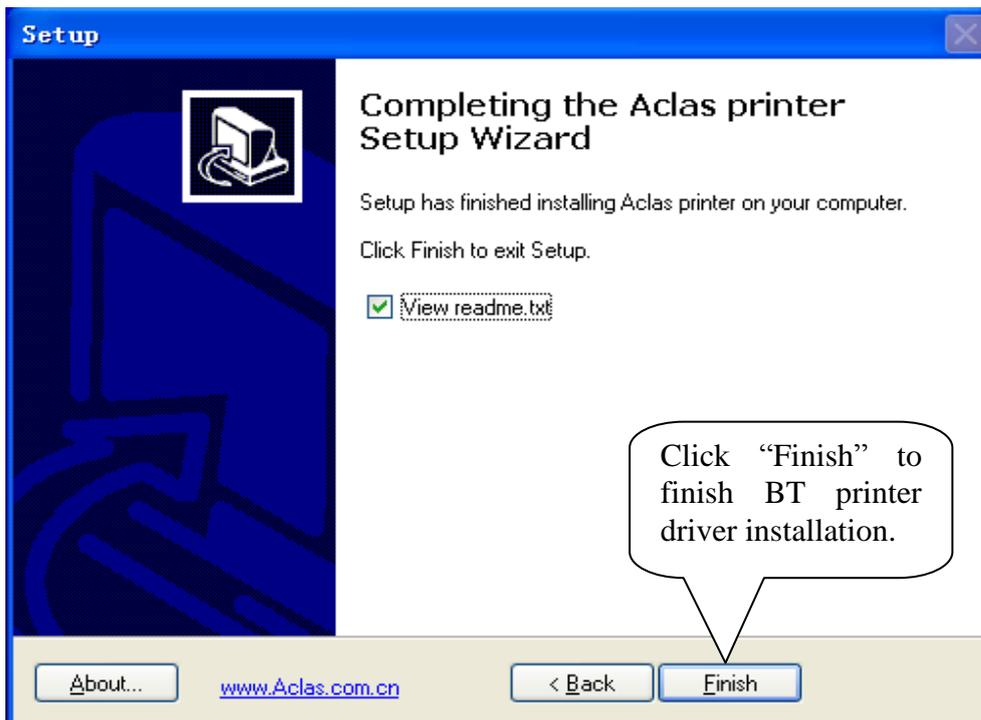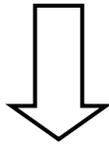

## 2.2. BT Dongle Driver Installation




To connect PP7 blue tooth printer to PC, users may buy an Aclas BT dongle to enable PC with blue tooth function.



The advantage of the Aclas BT dongle is: it could quickly find the surrounding BT devices that will be matched with rather than costing a long time to search the device.




This method is suitable for windows XP/VISTA OS.




Insert the BT dongle into the USB port of PC. The lower right corner of screen will show the icon , double click it. You can find the Bluetooth icon on the Control Panel in a few seconds as the following picture.

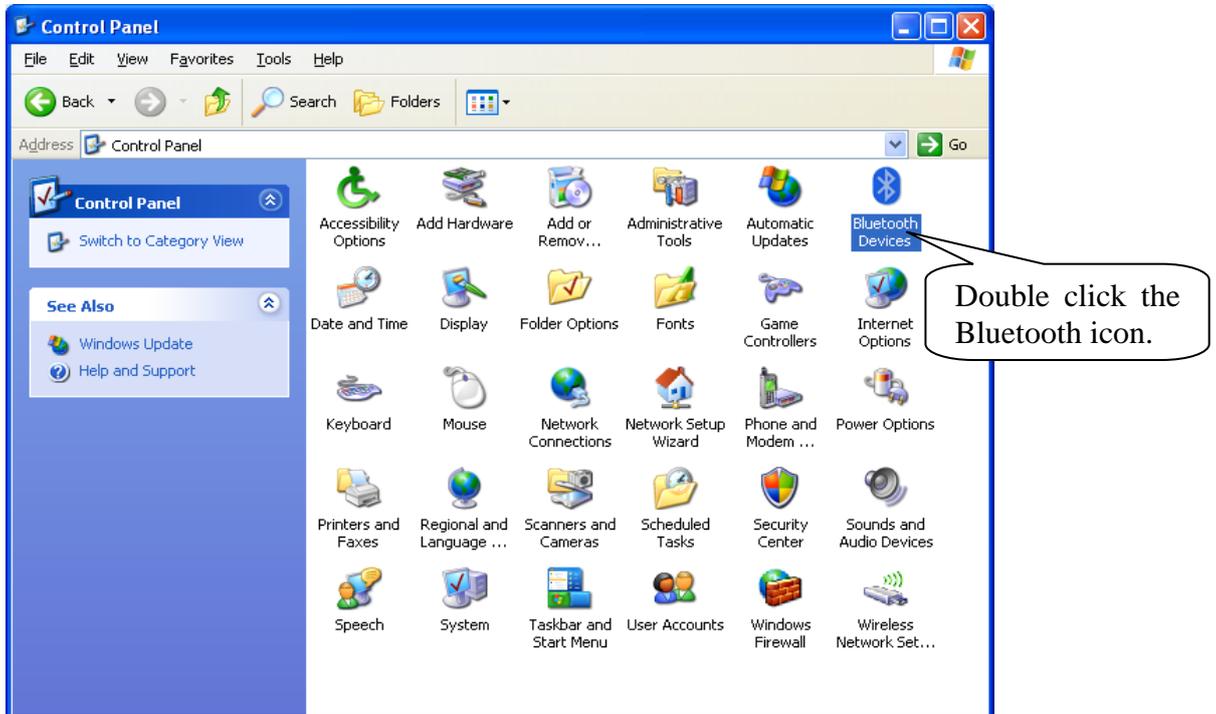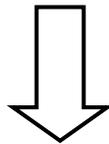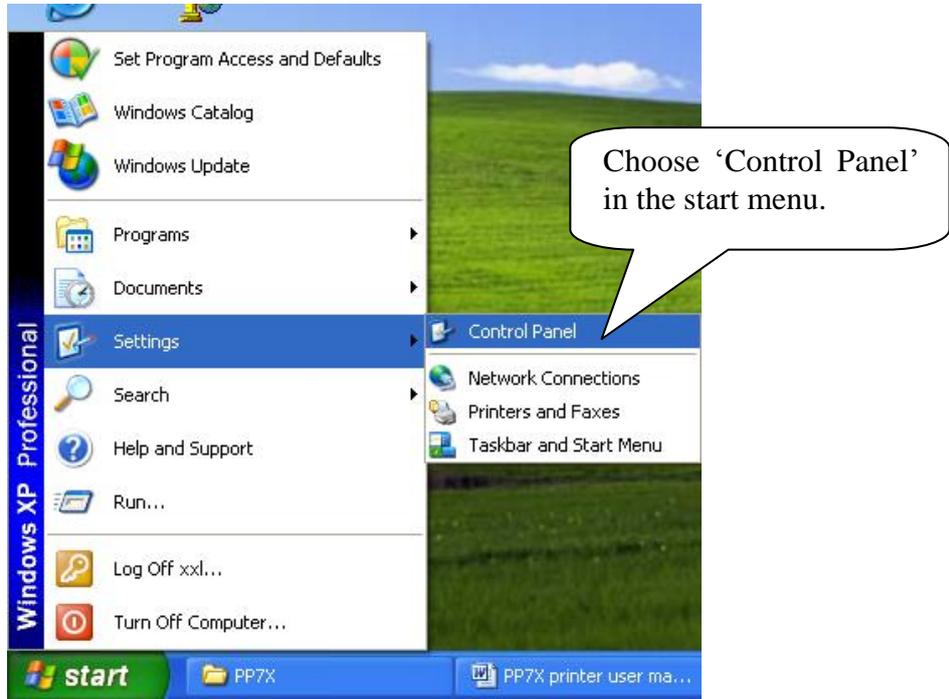

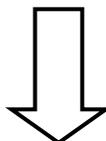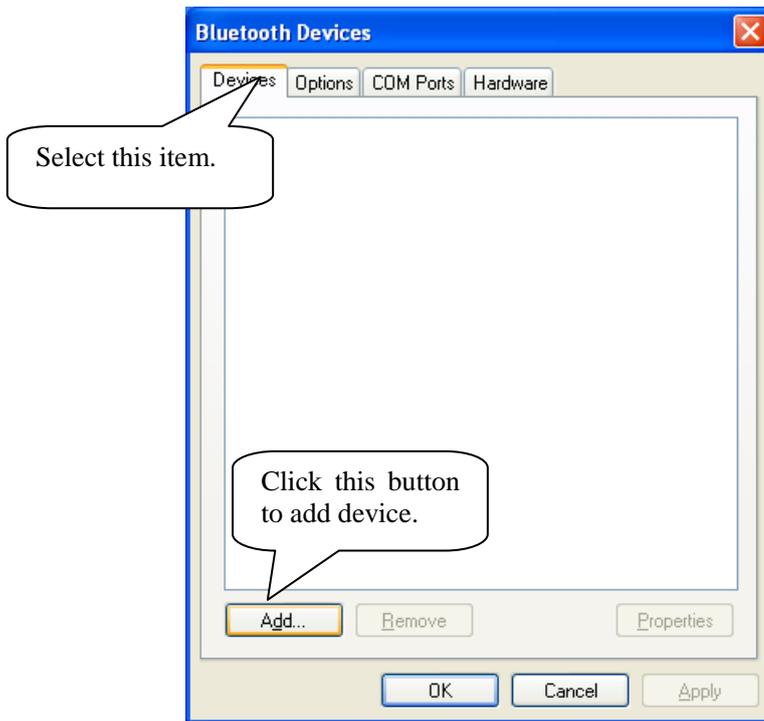

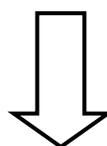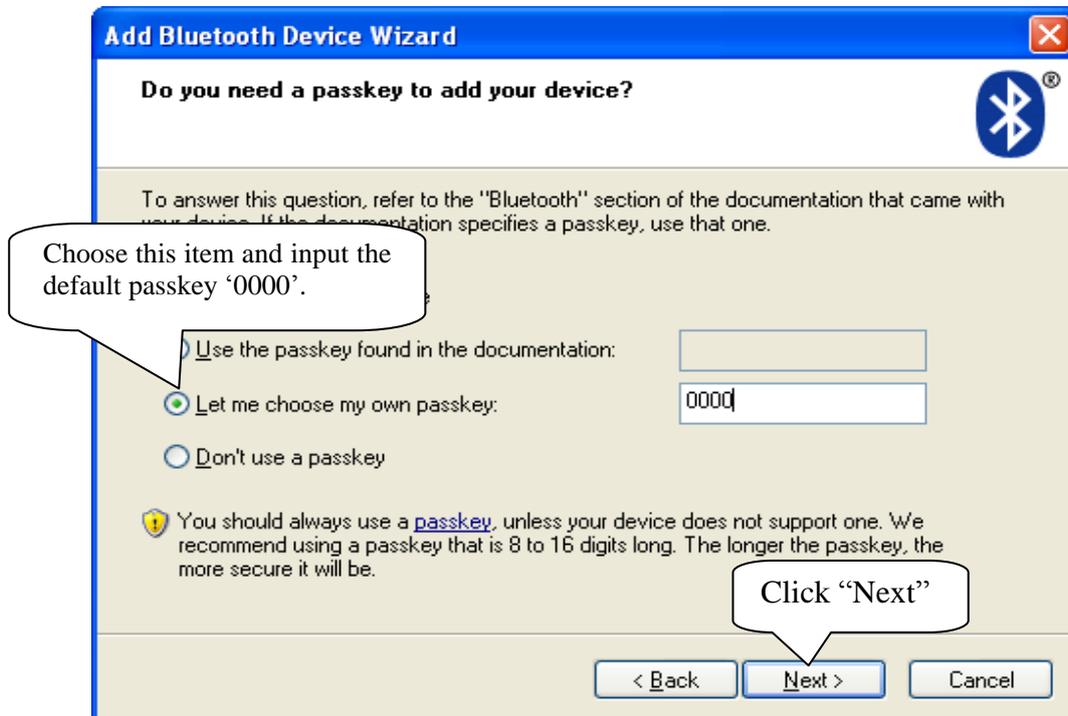
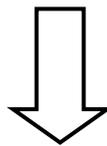


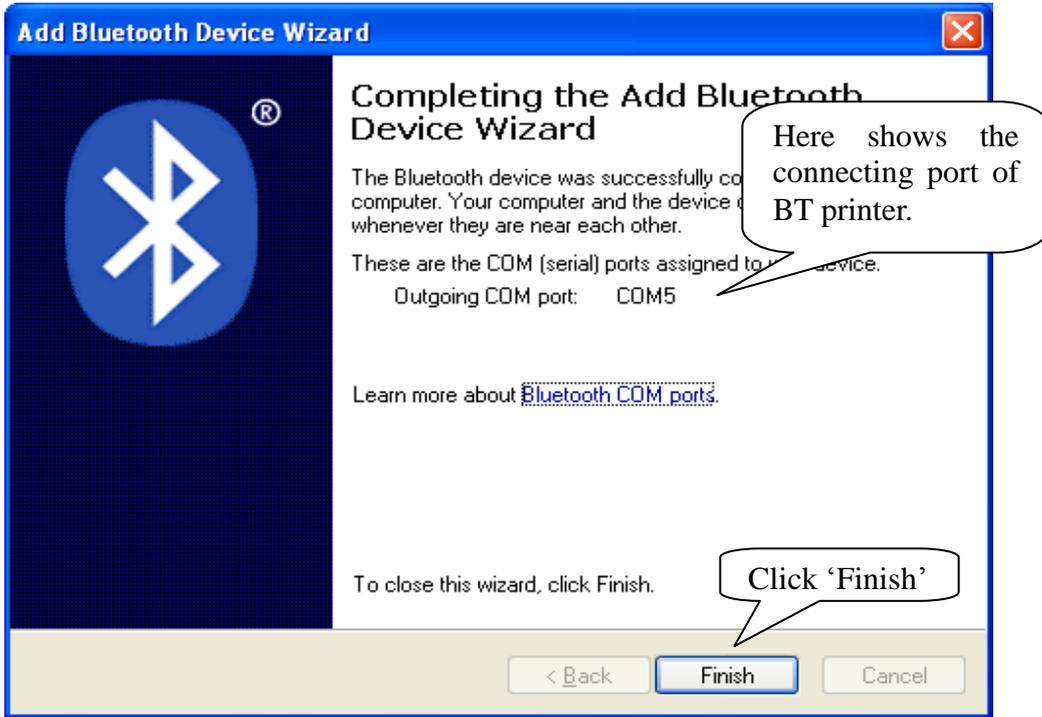


### 2.3. How to know the connect port

After installing the driver, you can follow the steps below to know which port is connected.

Double click the icon  .

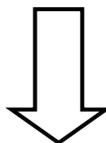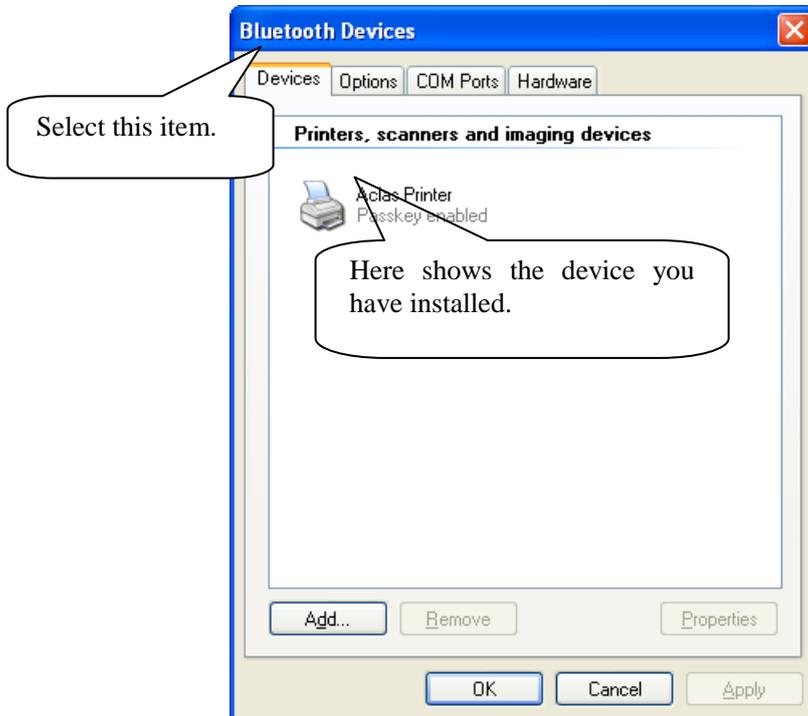

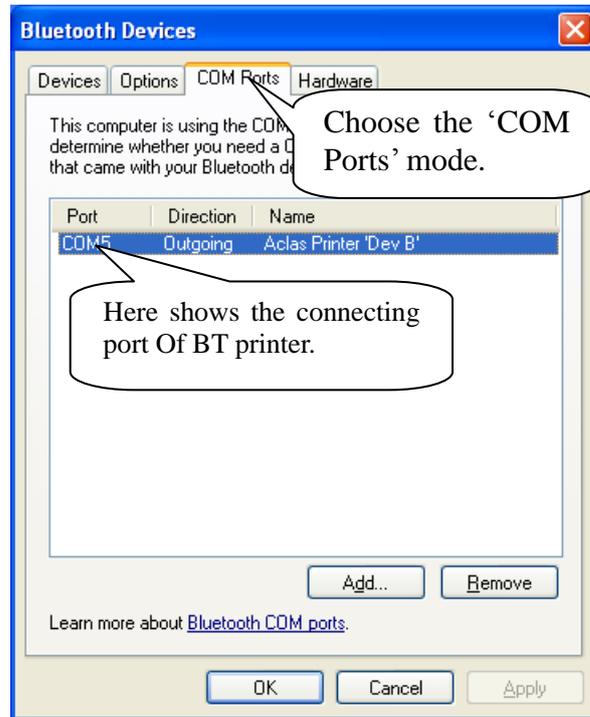

## 2.4. How to Config Connect Port

Please refer to Chapter 1.3 “How to config port” for the detail of connect port configuration.

## 3. Wireless 2.4G/Wireless 433 Printer Driver Installation

The communication distance: PP7 wireless 433 printers are up to 100m without obstacle  
 PP7 wireless 2.4G printers are up to 10m without obstacle

PP7X printers of this model are able to communicate with PC by two ways, via 433MHz Base Station or 2.4G Dongle. If you use 433MHz Base Station, please refer to Chapter 3.2; if use 2.4G Dongle, please refer to Chapter 3.3.

### 3.1. Wireless Printer Driver Installation

**Note:** The working baudrate of wireless 433 printer is ‘9600’, its printing speed is relatively lower. It had better not use driver printing, we suggest that you adopt command print.

Please refer to **chapter 2.1 “BT Printer Driver Installation”** for the detail of the wireless printer driver installation.



### 3.2. Wireless 433 Base Station

#### ➤ Wireless Printer Setting:



If printer needs to communicate with PC through base station, the following operation should be carried out.

1. Power on BS via power supply adaptor, the power indicator light lightened.
2. Connect BS with PC via Ethernet.

3. Double click 'Internet Explorer' on your PC desktop, input Base Station IP '192.168.1.14', and then press [Enter] on your keyboard, system displays as follows:

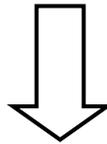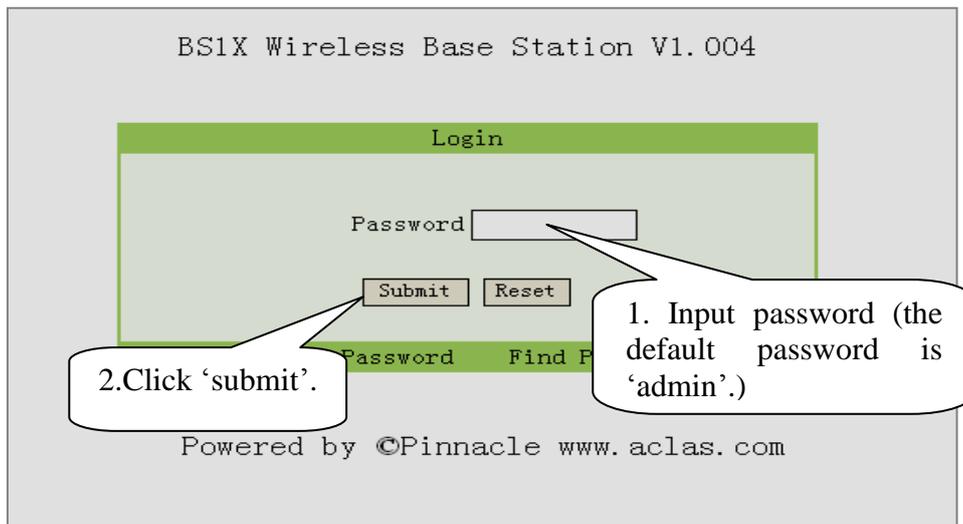

4. Enter 'station menu' interface, choose 'Printer IP Address Settings' item:

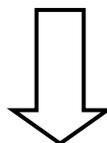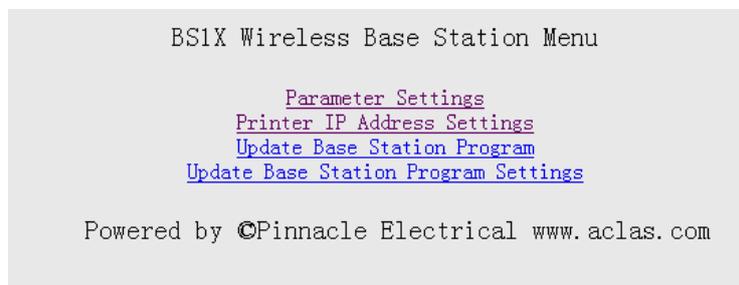


Add, Remove, or Change printer server listening port in the interface as below:



If choose 'Add IP Address To List' to add printer, please input the new added printer's 'IP address' and 'comments', and click 'add'.


BS1X Wireless Base Station Add IP Address To List

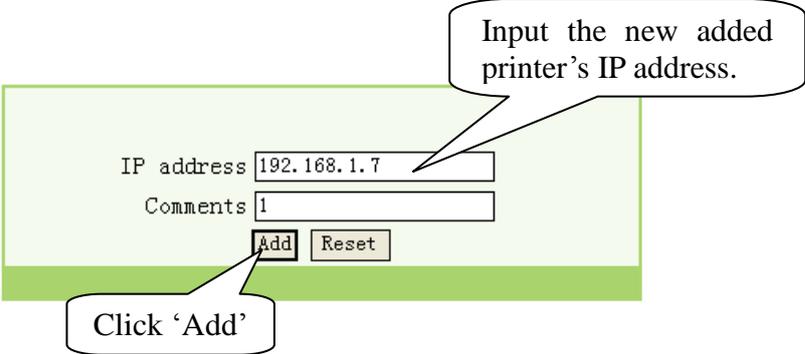

Powered by ©Pinnacle www.aclas.com

If you choose 'Remove IP Address From List', please input the new added printer's IP address or comments, and click 'Remove'; if you need to delete IP address, please click 'Reset'.

BS1X Wireless Base Station Remove IP Address From List

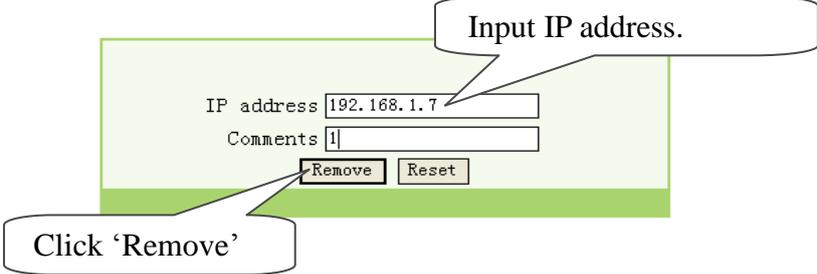






Powered by ©Pinnacle www.aclas.com



### 3.3. Wireless 433 USB Dongle/2.4G

#### 3.3.1. USB Dongle Driver Installation

You can install the USB dongle driver after you install printer driver.  
Double-click file *CP210x\_VCP\_Win2K\_XP\_S2K3.exe*, pop-up this window:

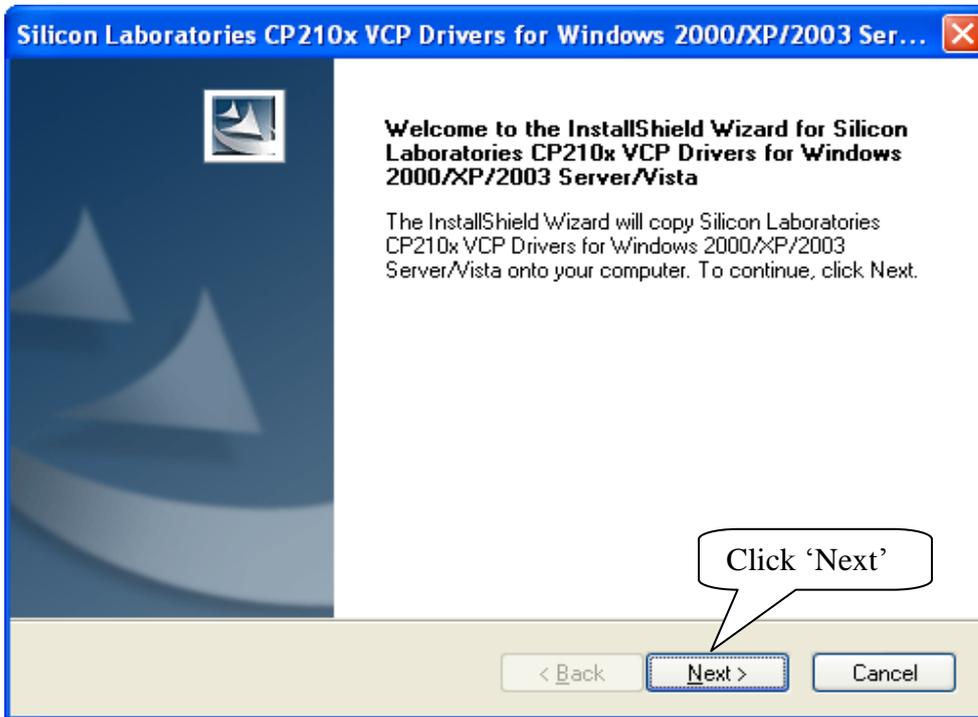

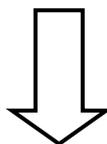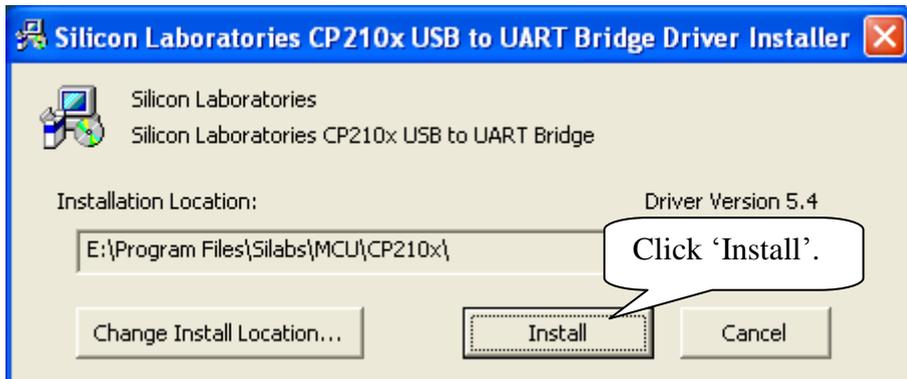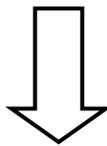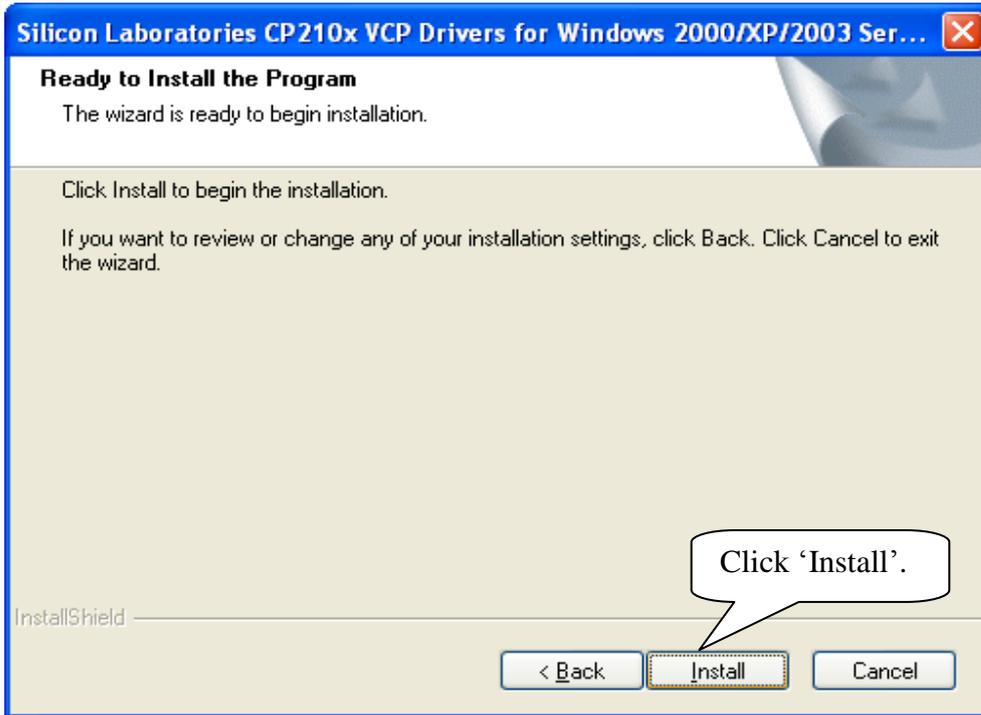



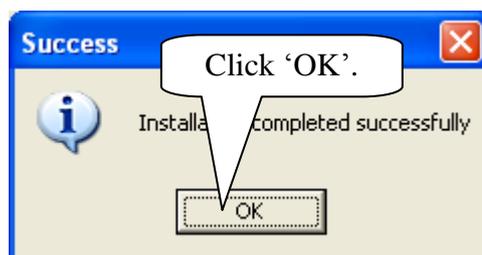
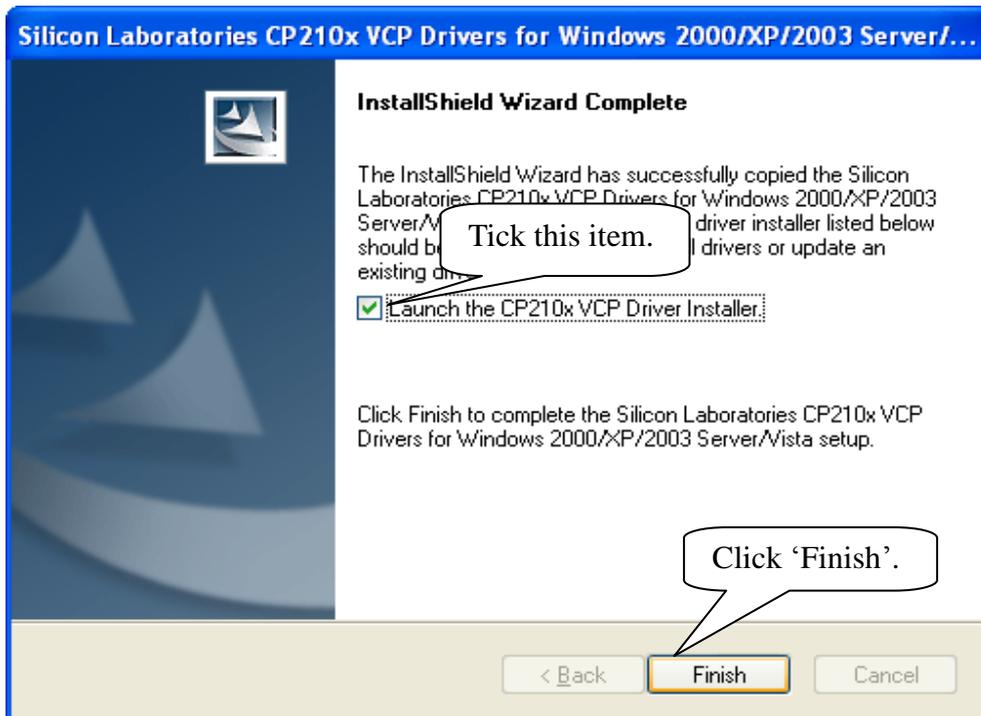


### 3.3.2. How to Know The Connect Port

After you install USB dongle driver, restart computer, and insert the 433 dongle into the USB port of computer. Then, you can follow below steps to know which port is connected.


Right click 'My Computer' icon on the desktop, and choose 'Manage'.

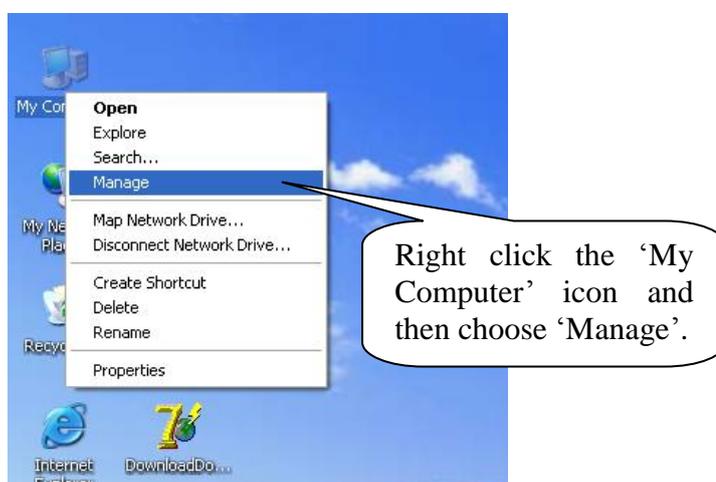

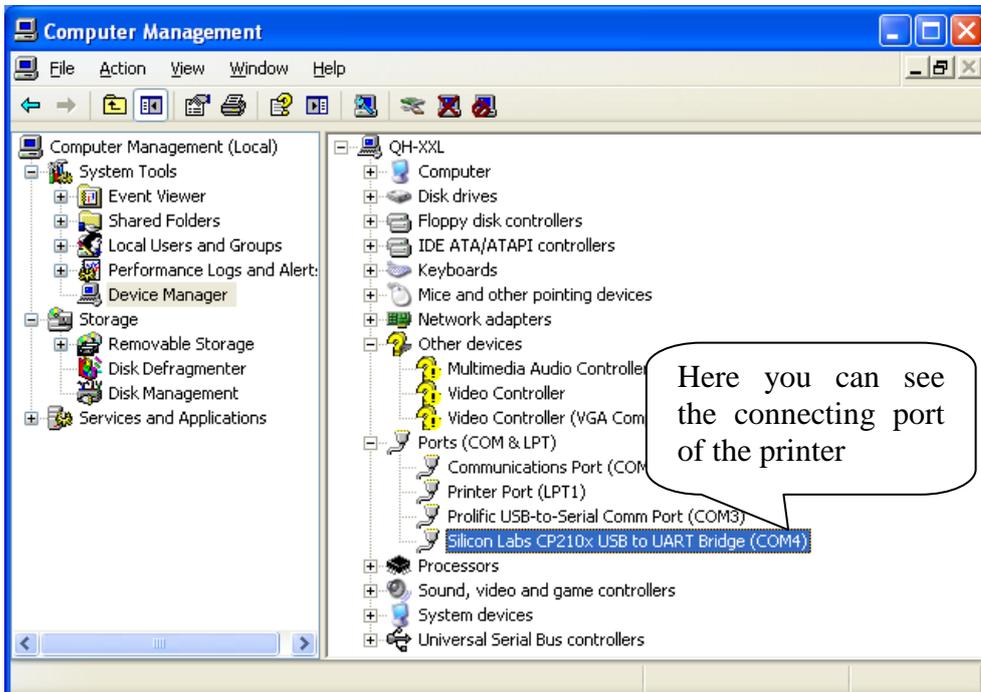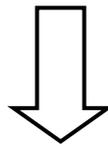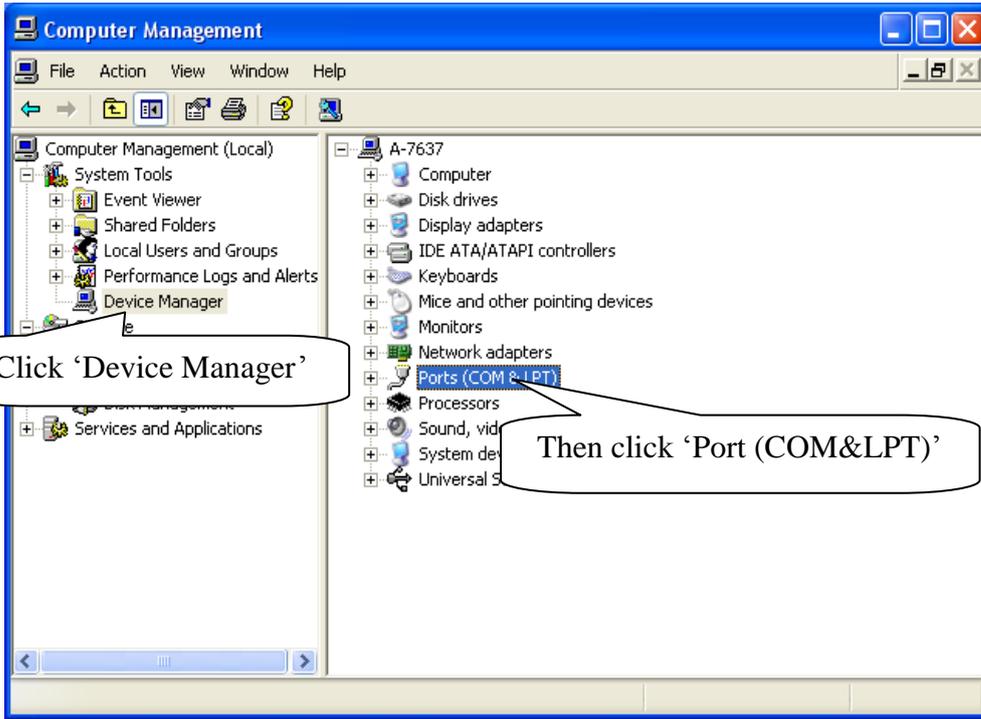

### 3.3.3. Dongle Parameter Setting

Double click to open 'DownloadDongle.exe'. Download setting to 433 dongle in order to realize wireless connection between PC and the printer.

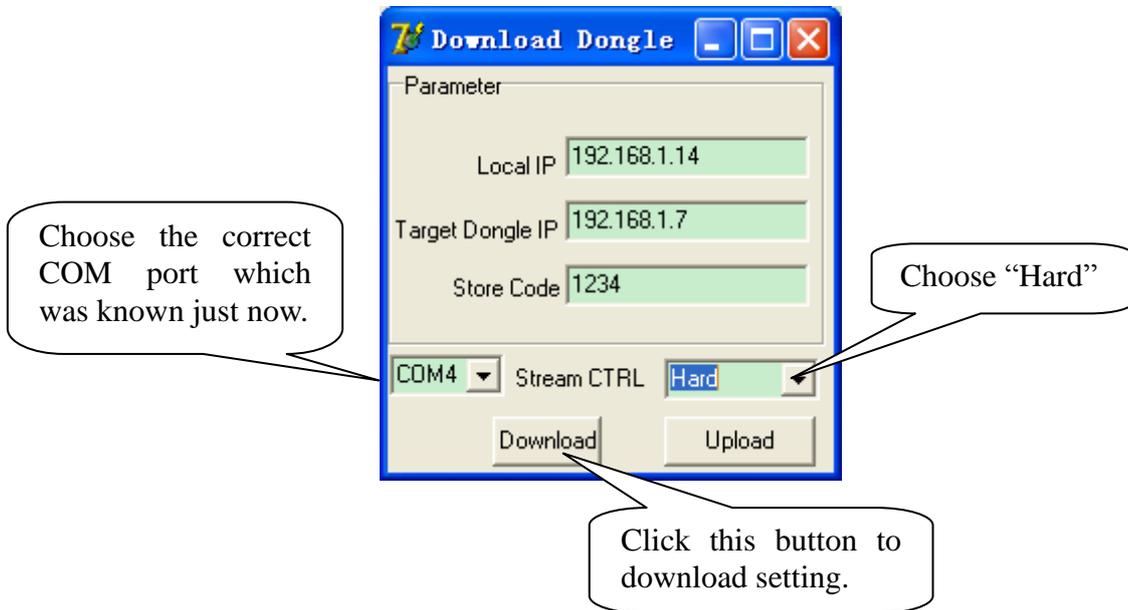

**Local IP:** the IP of 433 dongle.

**Target Dongle IP:** the wireless IP address of PP7HW4.

**Stream CTRL:** stream control, if the transmitting data is over 255byte, please choose 'Hard'. If the software is used to transmit data, please set the stream control as 'Hard'.

**Note:** After click the button 'Download', if the system display 'Download OK', it prompts the parameter setting is successful, and then please pull out the dongle and insert it again; if the system display 'Fail', please check whether you choose the correct COM port, or whether the COM port is occupied by other equipment.

### 3.3.4. How to Config Connect Port

Please refer to Chapter 1.3 "How to config port" for the detail of connect port configuration.

