

2D Barcode Scanner User's Manual



V1.0.1

intro

This user's manual is designed for 2D barcode scanner. For detailed usage information, please download the complete user's manual from our website or from our authorized distributors.

Scanning the corresponding setting code, you can change the bar code scanner related function Settings.

System settings

Factory default settings



Factory default

Note: Factory default settings are marked with an asterisk "*" in this manual.

Interface



USB-KBW(*)



USB-COM



RS-232

Barcode setting



Activate scanning of all barcode types



Turn on default reading type (*)



Reverse OFF(*)



Reverse ON

Reading mode



Manual mode(*)



Continuous mode



Automatic mode

Sensitivity



High



Middle(*)

Sound



On(*)



Off

illumination



Reading Normal(*)



Off



On

Aiming



Reading Normal(*)



Off



On

USB-KBW Setting

Virtual keyboard



standard keyboard(*)



Virtual keyboard



Ctrl



Alt



Control character
output is off(*)

Data output encoding format



GBK(*)



UTF8



Original data output



UNICODE

CapsLock Status Settings



CapsLock-Off



CapsLock-On

Web address code recognition



Enable(*)



Disable

Add terminal key stroke



Deactivate
terminal addition



Add terminal CR(*)



Add terminal TAB



Add terminal CR+LF

Keyboard layout



USA(*)



French



Hungary



Japan



Turkey Q



Czech



Germany



Italy



Spain



Mexico
(Latin America)

RS-232 Setting

Baud rate



1200bps



9600bps(*)



19200bps



57600bps



4800bps



14400bps



38400bps



115200bps